

SVAN 948

SOUND AND VIBRATION DATA LOGGER

USER'S MANUAL

SVANTEK Sp. z o.o.

WARSAW, June 2004



Notice: *This user's manual presents the software version named 2.11 (cf. the description of **UNIT LABEL** position of **DISPLAY** list). The succeeding software versions (marked with the bigger numbers) can slightly change the view of some screens presented in the text of the manual.*

CONTENTS

1. INTRODUCTION	1 - 1
<i>Main features of the SVAN 948</i>	1 - 1
2. MANUAL CONTROL OF THE INSTRUMENT	2 - 1
2.1. CONTROL PUSH-BUTTONS ON THE FRONT PANEL	2 - 1
2.2. INPUT AND OUTPUT SOCKETS OF THE INSTRUMENT	2 - 4
3. SETTING OF THE INSTRUMENT	3 - 1
3.1. BASIS OF THE INSTRUMENT'S CONTROL	3 - 1
3.2. POWERING OF THE INSTRUMENT	3 - 19
3.2. INITIAL SETUP OF THE INSTRUMENT	3 - 20
4. MEASUREMENT FUNCTIONS OF THE INSTRUMENT	4 - 1
4.1. CALIBRATION	4 - 3
4.1.1. The calibration by the sensitivity introduction	4 - 4
<i>Calibration BY SENSITIVITY in the case of vibration signal</i>	4 - 4
<i>Calibration BY SENSITIVITY in the case of acoustic signal</i>	4 - 5
4.1.2. The calibration by the measurement	4 - 7
<i>Calibration BY MEASUREMENT in the case of vibration signal</i>	4 - 7
<i>Calibration BY MEASUREMENT in the case of acoustic signal</i>	4 - 8
4.2. LEVEL METER	4 - 10
4.2.1. Sound level meter	4 - 11
<i>One profile mode of measurement results presentation</i>	4 - 13
<i>3 PROFILES mode of measurement results presentation</i>	4 - 14
<i>Presentation of the statistical analysis results - STATISTICS</i>	4 - 14
<i>Presentation of time history - PLOT</i>	4 - 15
4.2.2. Vibration level meter	4 - 17
<i>One profile mode of measurement results presentation</i>	4 - 18
<i>3 PROFILES mode of the measurement results presentation</i>	4 - 19
<i>Presentation of time history - PLOT</i>	4 - 19
4.2.3. Measurement parameters setting	4 - 22
<i>Measurement parameters setting - INPUT list</i>	4 - 22
<i>Selection of measurement parameters - MEASURE SETUP</i>	4 - 23
<i>Setting time delay before the start of measurements - START DELAY</i>	4 - 23
<i>Setting the integration time - INT. TIME</i>	4 - 23
<i>Setting number of repetition of measurement cycles - REP. CYCLE</i>	4 - 25
<i>Setting time between two writings to the buffer's file - BUF. STEP</i>	4 - 25
<i>Setting parameters in channels and for octave analysis - CHANNELS SETUP</i>	4 - 25
<i>Setting parameters in a channel – CHANNEL x</i>	4 - 26
<i>Selection of the instruments mode - FILTER</i>	4 - 26
<i>Selection of the measurement range - RANGE</i>	4 - 26
<i>Selection of the weighting filter in SLM - FILTER</i>	4 - 27

<i>Selection of the weighting filter in VLM - FILTER</i>	4 - 28
<i>Selection of the RMS detector in SLM - DETECTOR</i>	4 - 29
<i>Selection of the RMS detector in VLM - DETECTOR</i>	4 - 29
<i>Selection of the measurement parameters - BUFFERS SETUP</i>	4 - 30
<i>Selection of the result to be saved in the buffer's file - BUFFERS</i>	4 - 30
<i>Selection of mode and triggering parameters - TRIGGER SETUP</i>	4 - 32
<i>Switching the triggering on and off - TRIGGER</i>	4 - 32
<i>Selection of the triggering signal in SLM - SOURCE</i>	4 - 33
<i>Setting the level of triggering - LEVEL</i>	4 - 34
<i>Setting the parameter related with the buffer triggering - PRE/POST TRIGGER</i>	4 - 34
4.3. ACTIVATION OF OPTIONAL FUNCTIONS	4 - 38
4.4. 1/1 OCTAVE ANALYSER	4 - 39
4.4.1. 1/1 OCTAVE analyser of acoustic signal	4 - 40
<i>Selection of the measurement range in 1/1 OCTAVE analysis of acoustic signal - RANGE</i>	4 - 43
<i>Selection of 1/1 OCTAVE analysis result of acoustic signal to be saved in the buffer's file - BUFFERS SETUP</i>	4 - 44
<i>Selection of 1/1 OCTAVE analysis parameters for acoustic signal - SPECTRUM</i>	4 - 46
<i>Selection of the weighting filter in 1/1 OCTAVE analysis of acoustic signal - FILTER</i>	4 - 46
<i>Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file - BUFFER</i>	4 - 47
<i>Selection of the result which triggers registration in BUFFER mode in 1/1 OCTAVE analysis of acoustic signal</i>	4 - 47
4.4.2. 1/1 OCTAVE analyser of vibration signal	4 - 49
<i>Measurement range selection in 1/1 OCTAVE analysis of vibration signal - RANGE</i>	4 - 53
<i>Selection of 1/1 OCTAVE analysis result of vibration signal to be saved in the buffer's file - BUFFERS SETUP</i>	4 - 54
<i>Selection of 1/1 OCTAVE analysis parameters for vibration signal - SPECTRUM</i>	4 - 55
<i>Selection of 1/1 OCTAVE analysis result of vibration signal to be saved in the buffer's file - BUFFER</i>	4 - 56
<i>Selection of the result which triggers registration in BUFFER mode in 1/1 OCTAVE analysis of vibration signal</i>	4 - 57
4.5. 1/3 OCTAVE ANALYSER	4 - 58
4.5.1. 1/3 OCTAVE analyser of acoustic signal	4 - 59
<i>Selection of the measurement range selection in 1/3 OCTAVE analysis of acoustic signal - RANGE</i>	4 - 62
<i>Selection of 1/3 OCTAVE analysis result of acoustic signal to be saved in the buffer's file - BUFFERS SETUP</i>	4 - 63
<i>Selection of 1/3 OCTAVE analysis parameters for acoustic signal - SPECTRUM</i>	4 - 65
<i>Selection of the weighting filter in 1/3 OCTAVE analysis of acoustic signal - FILTER position</i>	4 - 66
<i>Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file - BUFFER position</i>	4 - 66
<i>Selection of the result which triggers registration in BUFFER mode in 1/3 OCTAVE analysis of acoustic signal</i>	4 - 67
4.5.2. 1/3 OCTAVE analyser of vibration signal	4 - 68
<i>Measurement range selection in 1/3 OCTAVE analysis of vibration signal - RANGE</i>	4 - 75
<i>Selection of 1/3 OCTAVE analysis result of vibration signal to be saved in the buffer's file - BUFFERS SETUP</i>	4 - 76

<i>Selection of 1/3 OCTAVE analysis parameters for vibration signal - SPECTRUM</i>	4 - 77
<i>Selection of 1/3 OCTAVE analysis result of vibration signal to be saved in the buffer's file - BUFFER</i>	4 - 78
<i>Selection of the result which triggers registration in BUFFER mode in 1/3 OCTAVE analysis of vibration signal</i>	4 - 78
4.6. DOSE ANALYSER	4 - 80
<i>One profile mode of measurement results presentation</i>	4 - 80
<i>3 PROFILES mode of the measurement results presentation</i>	4 - 83
4.6.1. HAV and WBV measurement parameters setting	4 - 84
<i>Measurement parameters setting - INPUT</i>	4 - 84
<i>Setting parameters in channels and for octave analysis - CHANNELS SETUP</i>	4 - 85
<i>Setting parameters in a channel - CHANNEL x</i>	4 - 85
<i>Selection of the instrument - MODE</i>	4 - 85
<i>Selection of the measurement range - RANGE</i>	4 - 86
<i>Selection of the weighting filter in VLM - FILTER</i>	4 - 87
<i>Selection of the RMS detector in VLM - DETECTOR</i>	4 - 88
<i>Selection of measurement parameters - BUFFERS SETUP</i>	4 - 88
<i>Selection of the result to be saved in the buffer's file - BUFFERS</i>	4 - 88
5. AUXILIARY FUNCTIONS	5 - 1
5.1. DATA AVAILABLE ON THE SCREEN - DISPLAY LIST	5 - 1
<i>Selection of the modes of measurement results presentation - DISPLAY MODES</i>	5 - 1
<i>Selection of the parameters in graphical results presentation - DISPLAY SETUP</i>	5 - 3
<i>Setting of the scale in graphical results presentation - DISPLAY SCALE</i>	5 - 4
<i>Scaling of the vertical axis of the graphical presentation - DYNAMIC</i>	5 - 4
<i>Scaling of the horizontal axis of the graphical presentation - X-ZOOM</i>	5 - 4
<i>Selection of the weighted filters - TOTAL VALUES</i>	5 - 5
<i>Selection of the weighted filters for the 1st profile - TOTAL 1</i>	5 - 5
<i>Selection of the weighted filters for the 2nd profile - TOTAL 2</i>	5 - 6
<i>Selection of the weighted filters for the 3rd profile - TOTAL 3</i>	5 - 6
<i>Selection of spectrum type - SPECTRUM TYPE</i>	5 - 7
<i>Selection of the buffer's file to the display presentation - BUFFER VIEW</i>	5 - 8
<i>Checking the state of the internal battery - BATTERY</i>	5 - 12
<i>Setting the contrast of the display - CONTRAST</i>	5 - 13
<i>Setting the backlight parameters - BACKLIGHT</i>	5 - 14
<i>Automatic switch off of the backlight - TIMEOUT</i>	5 - 14
<i>Setting the brightness of the backlight - BRIGHTNESS</i>	5 - 14
<i>Checking specification of the instrument - UNIT LABEL</i>	5 - 15
5.2. SETUP MENU	5 - 16
<i>Programming of the instrument's internal timer - TIMER</i>	5 - 17
<i>Programming of the instrument's internal Real Time Clock - RTC</i>	5 - 18
<i>Setting the conditions for the diffuse field measurements - FIELD CORRECTION</i>	5 - 18

<i>Introduction the filter coefficients for 1/3 (1/1) OCTAVE analysis - USER FILTERS</i>	5 - 19
<i>Setting the coefficients of the user filters set - EDIT (position)</i>	5 - 21
<i>Setting the coefficients of the user filters - CLEAR</i>	5 - 21
<i>Selection of statistics levels to be saved in a file - STAT. LEVELS</i>	5 - 22
<i>Selection of the external mode - EXT. I/O SETUP</i>	5 - 22
<i>Selection of few push-buttons mode - SHIFT MODE</i>	5 - 24
<i>Selection of the working mode of <SHIFT> push-button - SHIFT</i>	5 - 24
<i>Selection of the working mode of <START / STOP> push-button - ST/SP</i>	5 - 24
<i>Return to the factory made settings - CLEAR SETUP</i>	5 - 25
<i>Selection of detector's type in the LEQ (RMS) calculations - RMS INTEGRATION</i>	5 - 26
<i>Setting the reference signal in vibration measurements - REFERENCE LEVEL</i>	5 - 26
<i>Setting the reference level of the acceleration signal - ACC</i>	5 - 27
<i>Setting the reference level of the velocity signal - VEL</i>	5 - 27
<i>Setting the reference level of the displacement signal - DIL</i>	5 - 27
<i>Selection of the vibration units - VIBRATION UNITS</i>	5 - 28
<i>Selection of the warnings - WARNINGS</i>	5 - 29
<i>Saving the measurement results in a file - RES.NOT SAVE</i>	5 - 29
<i>Selection of the vector coefficient - VECTOR DEF.</i>	5 - 30
<i>Selection of the vibration dose - HAV/WBV DOSE</i>	5 - 31
<i>Settings of the parameters of vibration dose - MEASURE DOSE</i>	5 - 32
<i>Settings of the parameters of vibration dose - EXPOSURE TIME</i>	5 - 32
<i>Settings of the parameters of vibration dose - AXIS SETUP</i>	5 - 33
<i>Selection of the standard of vibration dose - STANDARDS</i>	5 - 34
5.3. SAVING THE MEASUREMENT RESULTS	5 - 36
<i>Saving files</i>	5 - 36
<i>Selection of the file's operation - FILE</i>	5 - 37
<i>Saving files in the instrument's memory - SAVE and SAVE NEXT</i>	5 - 38
<i>Controlling the data storing in the instrument's memory - SAVE OPTIONS</i>	5 - 41
<i>Saving of the filters to the RAM memory - RAM FILE</i>	5 - 41
<i>Replacement of the existing files by the new ones - REPLACE</i>	5 - 41
<i>Controlling of the measurement statistics savings - SAVE STAT.</i>	5 - 42
<i>Controlling of the measurement results savings - AUTO SAVE</i>	5 - 42
<i>Loading the files with the measurement results - LOAD</i>	5 - 43
<i>Removing a file with the measurement results from memory - DELETE</i>	5 - 45
<i>Removing all files with measurement results from memory - DELETE ALL</i>	5 - 46
<i>Memory merging - DEFRAGMENTATION</i>	5 - 47
<i>Removing all files with results from buffer's memory - CLEAR BUFFER</i>	5 - 48
<i>Checking the contents of the memory - CATALOGUE</i>	5 - 49
<i>Checking the free space in the memory - FREE SPACE</i>	5 - 50
<i>Saving setup in the instrument's memory - SAVE SETUP and SAVE SETUP NEXT</i>	5 - 51
<i>Loading the files with the configuration - LOAD SETUP</i>	5 - 53
<i>Operations in buffer</i>	5 - 56

5.4. CALCULATION OF THE DOSE PARAMETERS - AUX. FUNCTIONS	5 - 58
<i>Selection of the calculation results - HAV CALCULATOR</i>	5 - 58
<i>Selection of the file with results of measurement - RESULT SEL.</i>	5 - 59
<i>Selection of the partial results - PARTIAL EAV/ELV</i>	5 - 61
<i>Selection of the partial exposure - PARTIAL EXP</i>	5 - 61
<i>Selection of the daily exposure - DAILY EXPOSURE</i>	5 - 62
<i>Selection of the calculation results - WBV CALCULATOR</i>	5 - 62
<i>Selection of the file with results of measurement - RESULT SEL.</i>	5 - 63
<i>Selection of the partial results - PARTIAL EAV/ELV</i>	5 - 64
<i>Selection of the partial exposure - PARTIAL RESULTS</i>	5 - 65
<i>Selection of the daily exposure - DAILY RESULTS</i>	5 - 66
APPENDIX A. REMOTE CONTROL	A - 1
INPUT / OUTPUT TRANSMISSION TYPES	A - 1
FUNCTION #1 – INPUT / OUTPUT OF THE CONTROL SETTING CODES	A - 1
FUNCTION #2 – READ-OUT OF THE MEASUREMENT RESULTS IN THE SOUND LEVEL METER OR VIBRATION LEVEL METER MODE	A - 4
FUNCTION #3 – READ OUT OF THE MEASUREMENT RESULTS IN 1/1 OCTAVE, 1/3 OCTAVE	A - 6
FUNCTION #4 – READ OUT OF THE DATA FILE FROM THE INTERNAL FLASH DISC AND/OR THE SPECIAL FILE LOCATED IN THE RAM MEMORY	A - 6
FUNCTION #5 – READ OUT OF THE STATISTICAL ANALYSIS RESULTS	A - 8
FUNCTION #6 – REMOTE SETTING OF THE USER FILTERS	A - 9
FUNCTION #7 – SPECIAL CONTROL FUNCTIONS	A - 10
CONTROL SETTING CODES	A - 11
APPENDIX B. DATA FILE STRUCTURES	B - 1
B.1. STRUCTURE OF THE SVAN 948 FILE	B - 1
B.2. STRUCTURE OF THE FILE WITH THE RESULTS FROM THE SLM MODE	B - 10
B.3. STRUCTURE OF THE FILE WITH THE RESULTS FROM THE VLM MODE	B - 10
B.4. STRUCTURE OF THE FILE WITH 1/1 OCTAVE ANALYSIS RESULTS	B - 10
B.5. STRUCTURE OF THE FILE WITH 1/3 OCTAVE ANALYSIS RESULTS	B - 10
B.6. STRUCTURE OF THE FILE WITH FFT ANALYSIS RESULTS	B - 11
B.7. STRUCTURE OF THE FILE CONTAINING RESULTS FROM BUFFER'S FILE	B - 11
B.7.1. The contents of the files in the buffer	B - 11
B.7.1.1. Record with the results	B - 11
B.7.1.2. Record with the state of the markers	B - 12
B.7.1.3. Records with the breaks in the results registration	B - 12
APPENDIX C. DATA SPECIFICATION	C - 1
C.1. SPECIFICATION OF THE SVAN 948 AS SOUND LEVEL METER	C - 1

C.2. SPECIFICATION OF THE SVAN 948 AS 1/1 OCTAVE, 1/3 OCTAVE AND FFT SOUND ANALYSER	C - 4
C.3. SPECIFICATION OF SVAN 948 AS VIBRATION LEVEL METER / ANALYSER	C - 7
C.3. MISCELLANEOUS SPECIFICATION OF SVAN 948	C - 11
APPENDIX D. DEFINITIONS AND FILTER CHARACTERISTICS	D - 1
D.1. DEFINITIONS AND FORMULAE	D - 1
D.1.1. Definitions of the results available in the SLM mode of the SVAN 948	D - 1
D.1.2. Definitions of the results available in the VLM mode of the SVAN 948	D - 4
D.2. CHARACTERISTICS OF DIGITAL FILTERS IMPLEMENTED IN SVAN 948	D - 5
The digital weighting filters implemented in the SLM mode	D - 5
The digital weighting filters implemented in the SLM mode	D - 7
The digital filters implemented in the vibration level meter (VLM) mode for the velocity measurements	D - 8
The digital filters implemented in the vibration level meter (VLM) mode for the displacement measurements	D - 10
The digital filters used in HUMAN VIBRATION measurements	D - 12
The digital HP filter implemented in 1/1 OCTAVE, 1/3 OCTAVE and FFT analysis in the SVAN 948 instrument	D - 16
The digital 1/1 OCTAVE and 1/3 OCTAVE filters implemented in the SVAN 948 instrument	D - 17

INDEX OF LISTS, SUB-LISTS AND POSITIONS

1/1 OCTAVE	<i>Selection of 1/1 OCTAVE analysis, position of FUNCTION sub-list</i>	4 - 39
1/3 OCTAVE	<i>Selection of 1/3 OCTAVE analysis, position of FUNCTION sub-list</i>	4 - 58
3 PROFILES	<i>Measurement results presentation mode (numerical), position of DISPLAY sub-list</i>	5 - 1
ACC	<i>Setting the reference level for acceleration measurements, position of REFERENCE LEVEL sub-list</i>	5 - 26
ANALOG	<i>Type of input / output devices, sub-list of EXT. I/O SETUP</i>	5 - 23
AUTO SAVE	<i>Controlling of measurement results savings, position of SAVE OPTIONS sub-list</i>	5 - 42
AXIS SETUP	<i>Assign axis of accelerometer to the number of channels, sub-list of HAV/WBV DOSE list</i>	5 - 33
BACKLIGHT	<i>Setting the backlight parameters, sub-list of DISPLAY list</i>	5 - 14
BATTERY	<i>Checking the state of the internal battery, position of DISPLAY list</i>	5 - 12
BRIGHTNESS	<i>Setting the brightness of the backlight, position of BRIGHTNESS sub-list</i>	5 - 14
BUF. STEP	<i>Setting time between two writings to the buffer's file, position of MEASURE SETUP sub-list</i>	4 - 25
BUFFER VIEW	<i>Selection of the buffer's file to the screen presentation, sub-list of DISPLAY list</i>	5 - 8
BUFFER	<i>Selection of 1/1 OCTAVE analysis result to be saved in the buffer's file, position of SPECTRUM sub-list</i>	4 - 47
BUFFER	<i>Selection of 1/3 OCTAVE analysis result to be saved in the buffer's file, position of SPECTRUM sub-list</i>	4 - 78
BUFFERS	<i>Selection of the result to be saved in the buffer's file, position of BUFFERS SETUP sub-list</i>	4 - 30
CAL. LEVEL	<i>Setting the level of the calibrator's signal, position of CALIBRATION sub-list</i>	4 - 4
CALIBRATION	<i>Calibration of sound measurement channel, sub-list of FUNCTION list</i>	4 - 4
CATALOGUE	<i>Controlling the contents of the memory, position of FILE list</i>	5 - 49
CHANNEL x	<i>Setting parameters in a profile of SLM, sub-list of CHANNELS SETUP sub-list</i>	4 - 25
CHANNELS SETUP	<i>Setting parameters in profiles and for octave analysis, sub-list of INPUT list</i>	4 - 25
CLEAR SETUP	<i>Return to the factory made settings, position of SETUP list</i>	5 - 25
CLEAR BUFFER	<i>Removing all files with the results from buffer's memory, position of FILE list</i>	5 - 48
CLEAR	<i>Clearing the coefficients of the user filters, position of USER FILTER sub-list</i>	5 - 21
CONTRAST	<i>Setting the contrast of the screen, position of DISPLAY list</i>	5 - 13
DAILY EXPOSURE	<i>Displaying the daily exposure in DOSE mode, sub-list of HAV CALCULATOR sub-list</i>	5 - 66
DAILY RESULTS	<i>Displaying the daily exposure and daily dose in DOSE mode, sub-list of WBV CALCULATOR sub-list</i>	5 - 66
DEFRAGMENTATION	<i>Memory merging, position of FILE list</i>	5 - 47
DELETE ALL	<i>Removing all files from instrument's memory, position of FILE list</i>	5 - 46
DELETE	<i>Removing a file with the results from instrument's memory, position of FILE list</i>	5 - 45
DETECTOR	<i>Selection of the RMS detector, position of CHANNEL x sub-list</i>	4 - 29
DIGITAL IN	<i>Type of input / output devices, sub-list of EXT. I/O SETUP</i>	5 - 23
DIGITAL OUT	<i>Type of input / output devices, sub-list of EXT. I/O SETUP</i>	5 - 23
DIL	<i>Setting the reference level for displacement measurements, position of REFERENCE LEVEL sub-list</i>	5 - 27
DISPLAY MODES	<i>Selection of the ways of measurement results presentation, sub-list of DISPLAY list</i>	5 - 1
DISPLAY SCALE	<i>Selection of the scale in graphical results presentations, sub-list of DISPLAY list</i>	5 - 4
DISPLAY	<i>Data available on the screen, main list (function of the push-button)</i>	5 - 1
DOSE	<i>Selection of DOSE measurements, position of FUNCTION sub-list</i>	5 - 32
DYNAMIC	<i>Scaling of the vertical axis of the graphical presentation, position of DISPLAY SCALE sub-list</i>	5 - 4

ENTER CODE	<i>Access to optional functions</i>	4 - 38
EXPOSURE TIME	<i>Setting the exposure time, position of HAV/WBV DOSE list</i>	5 - 32
EXT. I/O SETUP	<i>Selecting the external devices, sub-list of SETUP list</i>	5 - 22
FIELD CORRECTION	<i>Setting the conditions for the diffuse field measurements, position of SETUP list</i>	5 - 18
FILE NAME	<i>Edition of the file name in which the measurement results has to be saved</i>	5 - 37
FILE	<i>Available operations on files, main list (function of the push-button)</i>	5 - 37
FILTER	<i>Selection of the weighting filter, position of CHANNEL x sub-list</i>	4 - 27
FILTER	<i>Selection of the weighting filter in 1/1 OCTAVE analysis, position of SPECTRUM sub-list</i>	4 - 46
FILTER	<i>Selection of the weighting filter in 1/3 OCTAVE analysis, position of SPECTRUM sub-list</i>	4 - 66
FREE SPACE	<i>Checking the free space in the memory, position of FILE list</i>	5 - 50
FUNCTION	<i>Selection of the unit's measurement function, main list (function of the push-button)</i>	2 - 3
HAV CALCULATOR	<i>Selection of DOSE measurements, position of FUNCTION sub-list</i>	5 - 58
HAV/WBV DOSE	<i>Selection of DOSE measurements, position of FUNCTION sub-list</i>	5 - 32
INPUT	<i>Measurement parameters setting, main list (function of the push-button)</i>	4 - 22
INT. TIME	<i>Setting the integration time, position of MEASURE SETUP sub-list</i>	4 - 23
LEVEL METER	<i>Selection of LM function, position of FUNCTION sub-list</i>	4 - 10
LEVEL	<i>Selection of the triggering mode, position of TRIGGER SETUP sub-list</i>	4 - 34
LOAD SETUP	<i>Loading configuration from the memory with the instruments configuration, position of FILE list</i>	5 - 53
LOAD	<i>Loading file from the memory with the measurements results, position of FILE list</i>	5 - 43
MEASUR. FUNCTION	<i>Selection of the available measurement function, sub-list of FUNCTION list</i>	4 - 10
MEASURE SETUP	<i>Selection of measurement parameters, sub-list of INPUT list</i>	4 - 23
MEASURE DOSE	<i>Activation of the MEASURE DOSE, sub-list of HAV/WBV DOSE list</i>	5 - 31
PARTIAL EXP.	<i>Displaying the partial exposure in DOSE mode, sub-list of HAV CALCULATOR sub-list</i>	5 - 61
PARTIAL RESULTS	<i>Displaying the partial exposure results, sub-list of HAV CALCULATOR sub-list</i>	5 - 65
PARTIAL EAV/ELV	<i>Displaying the partial results in DOSE mode, sub-list of HAV CALCULATOR</i>	5 - 64
PLOT	<i>Measurement results presentation mode (graphical), position of DISPLAY MODES sub-list</i>	5 - 1
RAM FILE	<i>Saving the results of the measurements in the special file at RAM memory, position of the SAVE OPTIONS list</i>	3 - 10
RANGE	<i>Selection of the measurement range in SLM and VLM, position of INPUT list</i>	4 - 26
RANGE	<i>Selection of the measurement range in 1/1 OCTAVE analysis, position of INPUT list</i>	4 - 53
RANGE	<i>Selection of the measurement range in 1/3 OCTAVE analysis, position of INPUT list</i>	4 - 75
REFERENCE LEVEL	<i>Setting the reference level for vibration measurements, sub-list of SETUP list</i>	5 - 26
REP. CYCLE	<i>Setting number of repetition of measurement cycles, position of MEASURE SETUP sub-list</i>	4 - 25
REPLACE	<i>Replacement of the existing files by the new ones, position of SAVE OPTIONS sub-list</i>	5 - 41
RESULT SEL.	<i>Selection the files with H-A data, sub-list of HAV CALCULATOR sub-list</i>	5 - 59
RESULT SEL.	<i>Selection the files with WBV data, sub-list of WBV CALCULATOR sub-list</i>	5 - 63
RMS INTEGRATION	<i>Selection of detector's type in the LEQ calculations, position of SETUP list</i>	5 - 26
RTC	<i>Programming of the instrument's internal Real Time Clock, position of RTC sub-list</i>	5 - 14
SAVE NEXT	<i>Saving files in the memory with the name's modification, position of FILE list</i>	5 - 38
SAVE NEXT	<i>Saving configuration in the memory with the name's modification, position of FILE list</i>	5 - 51

SAVE OPTIONS	<i>Controlling of the data storing in the instrument's memory, sub-list of FILE list</i>	5 - 41
SAVE STAT.	<i>Controlling of the statistics savings, position of SAVE OPTIONS sub-list</i>	5 - 42
SAVE	<i>Saving files in the instrument's memory, position of FILE list</i>	5 - 38
SAVE	<i>Saving the configuration of the instrument in the instrument's memory, position of FILE SETUP list</i>	5 - 38
SCALE	<i>Setting the scale for vibration measurements, position of DISPLAY SCALE sub-list</i>	5 - 4
SETUP	<i>Settings of the instrument's parameters, main list (function of the push-button)</i>	5 - 16
SHIFT MODE	<i>Selection of few push-buttons mode, sub-list of SETUP list</i>	5 - 24
SHIFT	<i>Selection of the working mode of <SHIFT> push-button, position of SHIFT MODE sub-list</i>	5 - 24
SOURCE	<i>Selection of the triggering signal, position of TRIGGER SETUP sub-list</i>	4 - 33
SPECTRUM	<i>Measurement results presentation mode (graphical), position of DISPLAY sub-list</i>	5 - 1
SPECTRUM	<i>Selection of 1/1 OCTAVE analysis parameters, sub-list of PROFILES SETUP sub-list</i>	4 - 65
SPECTRUM	<i>Selection of 1/3 OCTAVE analysis parameters, sub-list of PROFILES SETUP sub-list</i>	4 - 77
ST/SP	<i>Selection of the working mode of <START / STOP> push-button, position of SHIFT MODE sub-list</i>	5 - 24
STANDARD	<i>Selection of the STANDARD of the measurement of vibration dose, sub-list of HAV/WBV DOSE list</i>	5 - 34
START DELAY	<i>Setting start delay before the start of measurement, position of</i>	
STATISTICS	<i>Measurement results presentation mode (graphical), position of DISPLAY sub-list</i>	5 - 1
TIMER	<i>Programming of the instrument's internal timer, position of SETUP list</i>	5 - 17
TOTAL VALUE	<i>Selection the weighted filter, sub-list of DISPLAY SETUP / CHANNEL x list</i>	5 - 5
TRIGGER SETUP	<i>Selection of mode and parameters of triggering, sub-list of INPUT list</i>	4 - 32
TRIGGER	<i>Switching triggering on and off, position of TRIGGER SETUP sub-list</i>	4 - 32
UNIT LABEL	<i>Checking specification of the instrument, position of DISPLAY list</i>	5 - 15
USER FILTERS	<i>Introduction of 1/3 octave filter coefficients, sub-list of SETUP list</i>	5 - 19
VECTOR DEFINITION	<i>Selecting of the vector coefficient, sub-list of SETUP list</i>	5 - 30
VEL	<i>Setting the reference level for velocity measurements, position of REFERENCE LEVEL sub-list</i>	5 - 27
VIBRATION UNITS	<i>Selection of the vibration units, position of SETUP list</i>	5 - 28
WBV CALCULATOR	<i>Selection of DOSE measurements, position of FUNCTION sub-list</i>	5 - 62
X-ZOOM	<i>Scaling of the horizontal axis of the graphical presentation, position of DISPLAY SCALE sub-list</i>	5 - 4