



SVANTEK

INSTRUMENTATION FOR SOUND & VIBRATION
MEASUREMENTS AND ANALYSIS

ISO 9001



SV 102

DUAL-CHANNEL ACOUSTIC DOSIMETER

USER MANUAL



*SVANTEK Sp. z o.o.
WARSAW, July 2008*



Notice: *This user's manual presents the software revision named 1.05 / 1.05.9 (cf. the description of the **UNIT LABEL** position of the **DISPLAY** list). The succeeding software revisions (marked with the bigger numbers) can slightly change the view of some displays presented in the text of the manual.*

CONTENTS

1	INTRODUCTION	1-1
2	MANUAL CONTROL OF THE INSTRUMENT	2-1
2.1	Control push-buttons on the front panel	2-1
2.2	Input and output sockets of the instrument	2-3
3	SETTING THE INSTRUMENT	3-1
3.1	Basis of the instrument's control	3-1
3.2	Menu structure - short description of the functionalities	3-3
3.3	Powering of the instrument	3-19
3.4	Initial setup of the instrument	3-21
3.5	Icons	3-22
3.6	Activation of optional functions	3-24
3.7	Memory organisation	3-25
4	MODE AND FUNCTION SELECTION - FUNCTION	4-1
5	INSTRUMENT'S CALIBRATION - CALIBRATION	5-1
5.1	Calibration procedure of the instrument - BY MEASUREMENT	5-1
5.2	History of the calibration - LAST CALIBRATION	5-3
6	MEASUREMENT PARAMETERS SETTING - INPUT	6-1
6.1	Selection of measurement parameters - MEASUREMENT SETUP	6-2
6.1.1	Setting time delay before the start of measurements - START DELAY	6-2
6.1.2	Setting the integration period - INTEGR. PERIOD	6-2
6.1.3	Setting the number of repetition of measurement cycles - REP. CYCLE	6-3
6.1.4	Logger functionality switching On/Off - LOGGER	6-4
6.1.5	Setting period between two writings to the logger's file - LOGGER STEP	6-4
6.1.6	Logger file name edition - LOGGER NAME	6-4
6.2	Measurement range info - MEASUREMENT RANGE	6-5
6.3	Selection of dose meter parameters - DOSIMETER SETUP	6-6
6.3.1	Setting criterion sound level - CRITERION LEVEL	6-6
6.3.2	Setting criterion sound level - THRESHOLD LEVEL	6-7
6.3.3	Setting criterion sound level - EXCHANGE RATE	6-7
6.4	Setting parameters in channels - LEFT and RIGHT CHANNEL	6-7
6.4.1	Logger results selection in profiles - PROFILE x	6-7
6.5	Setting parameters in a profiles - PROFILE x	6-8
6.5.1	Weighting filter selection in a profile - FILTER	6-9
6.5.2	RMS detector selection - DETECTOR	6-9
6.6	Triggering mode and parameters selection - TRIGGER SETUP	6-9
6.6.1	Audio-event recording - EVENT TRIGGER	6-9
6.6.2	Trigger parameters setting - MEASURE TRIGGER	6-10
6.6.2.1	Switching the triggering on and off - TRIGGER	6-10
6.6.2.2	Selection of the triggering signal - SOURCE	6-11

6.6.2.3	Setting the level of the triggering signal - LEVEL	6-12
6.6.2.4	Setting the speed of the triggering signal changes - GRADIENT	6-12
6.6.3	Trigger parameters in logger setting - LOGGER TRIGGER	6-12
6.6.3.1	Switching the logger triggering on and off - TRIGGER	6-13
6.6.3.2	Selection of the triggering signal in logger - SOURCE	6-13
6.6.3.3	Setting the level of the triggering signal in the logger - LEVEL	6-13
6.6.3.4	Selection of the number of the results to be saved in the logger before the fulfilment of the triggering condition - PRE	6-13
6.6.3.5	Selection of the number of the results to be saved in the logger after the fulfilment of the triggering condition - POST	6-14
6.7	Selection of 1/1 octave spectrum parameters - SPECTRUM	6-14
6.7.1	Selecting the weighting filter in 1/1 OCTAVE analysis - FILTER	6-14
6.7.2	Logging PEAK and RMS results from spectrum - LOGGER PEAK and LOGGER RMS	6-15
7	DATA AVAILABLE ON THE DISPLAY - DISPLAY	7-1
7.1	Selection of the modes of results presentation - DISPLAY MODES	7-1
7.1.1	Switching on/off spectrum view - SPECTRUM	7-3
7.1.2	Switching on/off three profiles view - 3 PROFILES	7-3
7.1.3	Setting on/off statistics view - STATISTICS	7-4
7.1.4	Setting on/off logger view - LOGGER	7-6
7.1.5	Setting on/off the view of the file description - FILE INFO	7-6
7.2	Setting parameters of graphical presentation modes - DISPLAY SETUP	7-7
7.2.1	Setting the scale of presentation and display's grid - DISPLAY SCALE	7-7
7.2.1.1	Scaling the vertical axis of graphical mode presentation - DYNAMIC	7-7
7.2.1.2	Switching on/off the grid in graphical presentation - GRID	7-8
7.2.2	Setting main results view - MAIN VIEW	7-8
7.2.3	Setting 3 profiles view - 3 PROFILES VIEW	7-9
7.2.4	Setting the view of statistics presentation mode - STATISTICS VIEW	7-9
7.2.5	Setting the parameters of logger files presentation - SPECTRUM VIEW	7-10
7.2.5.1	Selection of spectrum type for the presentation - TYPE	7-10
7.2.5.2	Selection of MAX spectrum for the presentation - MAX	7-10
7.2.5.3	Selection of MIN spectrum for the presentation - MIN	7-10
7.2.6	Setting the parameters of logger files presentation - LOGGER VIEW	7-11
7.2.6.1	Selecting the shape of graphical presentation - VIEW	7-11
7.2.6.2	Setting time to be presented - TIME	7-11
7.3	Selection of logger's file to display presentation - LOGGER VIEW	7-12
7.4	Setting the parameters of the display - SCREEN SETUP	7-14
7.4.1	Setting contrast of the display - CONTRAST	7-14
7.4.2	Automatic switch off of the backlight - BACKLIGHT TIMEOUT	7-14
7.5	Checking the state of internal battery - BATTERY	7-15
7.6	Checking specification of the instrument - UNIT LABEL	7-15
8	SAVING THE MEASUREMENT RESULTS - FILE	8-1
8.1	Saving files in the instrument's memory - SAVE and SAVE NEXT	8-3
8.2	Controlling the data storing in the instrument's memory - SAVE OPTIONS	8-5
8.2.1	Saving data starting from the same address - RAM FILE	8-5

8.2.2	Replacement of the existing files by the new ones - REPLACE	8-6
8.2.3	Controlling the measurement statistics savings - SAVE STATISTICS	8-6
8.2.4	Automatical saving of measurement results - AUTO SAVE	8-7
8.3	Loading the files with the measurement results - LOAD	8-8
8.4	Removing a file with the measurement results from memory - DELETE	8-9
8.5	Removing all files with measurement results from memory - DELETE ALL	8-12
8.6	Merging file space - DEFRAGMENTATION	8-12
8.7	Checking the contents of the memory - CATALOGUE	8-13
8.8	Checking the free space in the memory - FREE SPACE	8-15
8.9	Saving setup files in the instrument's memory - SAVE SETUP	8-15
8.10	Loading the files with the setup settings - LOAD SETUP	8-18
8.10.1	Loading setup file - FILE SETUP	8-19
8.10.2	Standard setup loading - STANDARD SETUP	8-19
9	SETUP MENU - SETUP	9-1
9.1	Setting the language of the user interface - LANGUAGE	9-2
9.2	Return to the factory settings - CLEAR SETUP	9-2
9.3	Day time limits selection - DAY TIME LIMITS	9-3
9.4	Exposure time setting - EXPOSURE TIME	9-3
9.5	Available parameters of the Ext. I/O port selection - EXTERNAL I/O SETUP	9-4
9.5.1	Mode selection of the Ext. I/O port - MODE	9-4
9.5.2	Digital output-function selection of the Ext. I/O socket in left channel - FUNCTION	9-5
9.5.3	Polarisation selection of the digital output signal - POLARISATION	9-5
9.5.4	Active level selection of the digital output signal - ACTIVE LEVEL	9-5
9.5.5	Source signal selection for the alarm pulse generation - SOURCE	9-5
9.5.6	Alarm level selection on the digital output of Ext. I/O - ALARM LEVEL	9-6
9.6	Selection of keyboard settings - KEYBOARD	9-6
9.6.1	Switching the key lock on - KEY LOCK	9-6
9.6.2	<Shift> push-button working mode selection - SHIFT	9-7
9.7	Switching on/off the compensation filter - MICROPHONE	9-7
9.8	Detector's type selection in the LEQ calculations - RMS INTEGRATION	9-7
9.9	Programming the instrument's internal Real Time Clock - RTC	9-8
9.10	Setting ten statistical levels - STATISTICAL LEVELS	9-9
9.11	Programming the instrument's internal timer - TIMER	9-10
9.11.1	Selecting the mode of the timer function - MODE	9-10
9.11.2	Setting day of the instrument's switch on - START DAY	9-10
9.11.3	Setting hour of the instrument's switch on - START HOUR	9-11
9.11.4	Selecting the mode of the timer function - REPETITION	9-11
9.11.5	Description of the exemplary timer function execution	9-11
9.12	Warnings selection - WARNINGS	9-12
9.12.1	Saving the measurement results in a file - RESULTS NOT SAVED	9-13

LIST OF FIGURES

SV 102 instrument with the microphones	1-2
Control push-buttons of the SV 102 instrument.....	2-1
Top cover of the SV 102 instrument in 1:1 scale.....	2-3
Bottom cover of the SV 102 instrument in 1:1 scale	2-3
Front panel of the SV 102 instrument in 1:1 scale.....	2-4
Rear panel of the SV 102 instrument in 1:1 scale	2-4
Highlighted elements of the main list.....	3-1
RECENT ITEMS windows (after double pressing of Menu)	3-1
MENU window (a) and the elements of INPUT list (b)	3-2
MEASUREMENT SETUP window	3-2
MEASUREMENT SETUP window; INTEGR. PERIOD position accessible	3-2
INTEGRATION PERIOD position after pressing the <<< or >>> push-buttons, respectively.....	3-2
Displays after three consecutive pressing of <ESC> push-button from MEASUR. SETUP window.....	3-2
Displays during and after the accessing FREE SPACE window.....	3-3
Control diagram of FUNCTION list.....	3-3
Control diagram of CALIBRATION list	3-5
Control diagram of the INPUT list in DOSE METER mode.....	3-8
Control diagram of DISPLAY list	3-12
Control diagram of FILE list.....	3-15
Control diagram of SETUP list.....	3-19
BATTERY windows with different sources powering the instrument: AA batteries (a) and USB power (b)	3-20
Displays with “Battery” icon (a) and with BATTERY window (b).....	3-20
Displays with “Computer” icon (a) and with BATTERY window (b).....	3-20
SCREEN SETUP windows with BACKLIGHT TIMEOUT active (a), and not active (b)	3-20
Displays after switching on the instrument	3-21
Display in one profile presentation mode	3-21
Display options in simplified version (for SINGLE CHANNEL mode, DOSIMETER & 1/1 OCTAVE function)	3-22
Display with all available icons	3-23
FUNCTION window with MODE selected (a) and MODE window with DUAL CHANNEL mode selected (b).....	3-24
FUNCTION window with MEASUR. FUNCTION selected (a) and MEASUR. FUNCTION windows with DOSE & 1/1 OCTAVE (b) and SLM & 1/1 OCTAVE selected (c)	3-24
Displays during the entering of the access code to a function.....	3-24
Displays after unsuccessful verification of the access code	3-24
Scheme of the instrument’s memory organisation	Błąd! Nie zdefiniowano zakładki.
Main list with FUNCTION text selected (a) and FUNCTION list opened with MODE text selected (b).....	4-1
MEASUREMENT FUNCTION window opened with DOSE METER text selected (a), DOSE & 1/1 OCTAVE text selected (b), SLM text selected (c) SLM &1/1 OCTAVE text selected (d)	4-1
Activation of optional functions	4-1
Main list with CALIBRATION text selected.....	5-1
CALIBRATION window, channel selection	5-1
CALIBRATION window with LEFT CHANNEL text selected; BY MEASUREMENT text selected and BY MEASUREMENT window opened	5-2
Displays during the calibration measurement	5-2
Displays after the measurements (a) and after the acceptance of the value of the calibration factor (b).....	5-3
CALIBRATION list with LAST CALIBRATION text selected (a) LAST CALIBRATION window opened with ten calibration records (b).....	5-3
Displays with LAST CALIBRATION records	5-4
Empty LAST CALIBRATION window	5-4
Main list with INPUT text selected.....	6-1
INPUT window in DOSE METER mode	6-1
Exemplary displays with not active sub-lists of INPUT list.....	6-2
MEASUREMENT SETUP windows.....	6-2
MEASUREMENT SETUP windows; the setting of START DELAY with 1-second step	6-2
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 1-second step.....	6-3
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 1-minute step.....	6-3
MEASUREMENT SETUP windows; INTEGR. PERIOD setting with 1-hour step	6-3

MEASUREMENT SETUP windows; REP. CYCLE setting with the step equal to one.....	6-3
Displays with the deactivated and activated LOGGER.....	6-4
LOGGER STEP setting; available values from 1 second to 1 hour	6-4
LOGGER NAME edition in MEASUREMENT SETUP	6-4
Displays during the attempt of overwriting the existing file.....	6-4
Relations between INTEGR. PERIOD and LOGGER STEP	6-5
INPUT window with MEASUREMENT RANGE selected (a) and opened (b)	6-6
Displays when the level of the signal is too low.....	6-6
DOSIMETER SETUP selected in INPUT window and DOSIMETER SETUP window	6-6
DOSIMETER SETUP windows with CRITERION LEVEL selection.....	6-6
DOSIMETER SETUP windows with THRESHOLD LEVEL selection	6-7
DOSIMETER SETUP windows with EXCHANGE RATE selection	6-7
INPUT windows, LEFT CHANNEL and RIGHT CHANNEL texts selected	6-7
LEFT CHANNEL windows; PROFILE x selection.....	6-8
PROFILE 1 LEFT; LOGGER result selection.....	6-8
PROFILE 1 LEFT windows in SLM modes; available weighting filters and detectors	6-8
INPUT windows; PROFILE 1; PROFILE 2 and PROFILE 3 selected.....	6-8
PROFILE(x) windows; the selection of the RMS detector	6-9
TRIGGER SETUP selected in INPUT window and TRIGGER SETUP window opened in dosimeter modes.....	6-9
TRIGGER SETUP selected in INPUT window and TRIGGER SETUP window opened in SLM modes	6-9
Displays in the EVENT TRIGGER window	6-10
Displays in the MEASURE TRIGGER window	6-10
MEASURE TRIGGER window.....	6-10
MEASURE TRIGGER windows with SLOPE modes selected	6-11
MEASURE TRIGGER windows with LEVEL modes selected.....	6-11
MEASURE TRIGGER window with GRAD + mode selected.....	6-11
MEASURE TRIGGER window with SOURCE signal selection.....	6-12
MEASURE TRIGGER window with LEVEL selection in SLOPE + mode	6-12
MEASURE TRIGGER window with GRADIENT selection (1 dB/ms).....	6-12
LOGGER TRIGGER windows	6-13
LOGGER TRIGGER windows with not active SOURCE signal line.....	6-13
LOGGER TRIGGER window with LEVEL selection (1-dB step up)	6-13
LOGGER TRIGGER windows with PRE selection.....	6-14
LOGGER TRIGGER windows with POST selection	6-14
SPECTRUM selected in INPUT window and SPECTRUM window opened.....	6-14
SPECTRUM windows with FILTER selection	6-15
SPECTRUM windows with LOGGER PEAK and LOGGER RMS selection.....	6-15
Main list with DISPLAY text highlighted.....	7-1
DISPLAY window with DISPLAY MODES text selected	7-1
Switching between all available presentation modes in one-channel mode.....	7-2
Display after the end of the measurements with the file's name the data are saved-in	7-2
DISPLAY MODES windows with SPECTRUM.....	7-3
Displays in SPECTRUM mode for 1/1 OCTAVE analysis (LEFT (1L) and RIGHT (1R) channel).....	7-3
Displays with opening of logger plot for selected 1/1 OCTAVE centre frequency.....	7-3
Setting on and off the accessibility of three-profiles presentation mode	7-3
Measurement results in 3 PROFILES mode.....	7-4
Results in 3 PROFILES.....	7-4
Results in 3 PROFILES mode with selection of the profile	7-4
Results in 3 PROFILES mode with selection of statistical level.....	7-4
Setting on (a) and off (b) the accessibility of statistics presentation mode.....	7-5
Results presented in the statistics presentation mode	7-5
Instrument's Lxx statistical levels presented in graphical form.....	7-5
Statistics presentation mode, VIEW: EXTENDED	7-5
Results presented in statistic presentation mode during the measurements.....	7-6
Setting on and off the possibility of presentation the results saved in the logger	7-6
Different presentation modes of the results stored in logger (extended, full, normal).....	7-6
Setting on and off the logger's file description presentation mode	7-6
Exemplary contents of FILE INFO window.....	7-6
DISPLAY window with DISPLAY SETUP selected.....	7-7

DISPLAY SETUP window in SLM and 1/1 OCTAVE and DISPLAY SCALE one	7-7
DISPLAY SCALE windows with the possible values of DYNAMIC parameter	7-7
Results stored in logger presented with different DYNAMIC (160 dB, 80 dB, 40 dB, 20 dB, 10 dB)	7-8
DISPLAY SCALE windows with the grid switched on and off	7-8
Displays with the grid switched on and off	7-8
DISPLAY SETUP window, the MAIN VIEW text selected	7-8
MAIN VIEW window, VIEW selection	7-8
MAIN VIEW, NORMAL and LARGE VIEW	7-9
DISPLAY SETUP window with 3 PROFILES VIEW text selected	7-9
3 PROFLES VIEW windows, VIEW selection	7-9
3 PROFILES presentation mode, NORMAL VIEW and EXTENDED VIEW	7-9
DISPLAY SETUP window with STATISTICS VIEW selected and STATISTICS VIEW windows	7-9
STATISTICS presentation mode, NORMAL VIEW and EXTENDED VIEW	7-10
DISPLAY SETUP window with SPECTRUM VIEW text highlighted	7-10
SPECTRUM VIEW windows with TYPE selection	7-10
SPECTRUM VIEW windows with MAX spectrum selection	7-10
SPECTRUM VIEW windows with MIN spectrum selection	7-11
DISPLAY SETUP windows with LOGGER VIEW text highlighted	7-11
LOGGER VIEW windows with available values of VIEW parameter	7-11
Presentation of displays with different VIEW parameter; EXTENDED, FULL and NORMAL	7-11
Displays with the possible values of TIME parameter	7-11
Possible values of TIME parameter, REAL TIME and AVAILABLE TIME (more than 1 day)	7-12
DISPLAY window with LOGGER VIEW text highlighted	7-12
LOGGER VIEW windows with the selection of the file to be seen	7-12
LOGGER VIEW windows with the scrolling of the file to be seen	7-13
LOGGER VIEW window in the case when the files do not exist	7-13
Displays with the selected logger's file; the change of the cursor position	7-13
Displays with the selected logger's file; the change of the profile	7-13
Displays with the selected logger's file; the change of the result from a profile (PEAK, MAX, MIN, RMS)	7-13
DISPLAY window with SCREEN SETUP text highlighted	7-14
SCREEN SETUP windows; the change of the contrast	7-14
SCREEN SETUP windows; the BACKLIGHT TIMEOUT active and not active	7-14
DISPLAY window with BATTERY selected and BATTERY windows for different powering sources	7-15
DISPLAY window with UNIT LABEL text highlighted	7-15
UNIT LABEL windows opened and scrolled with the <<>, >>> push-buttons	7-15
Main list; FILE text highlighted	8-2
FILE window	8-2
Display after the attempt to perform an unavailable operation during measurement in progress	8-2
Saving a file using SAVE option	8-3
Display during the selection of the character's position to be edited	8-3
Display during the selection of the character	8-3
Displays during the attempt of overwriting the existing file, changing the name and saving data	8-4
Displays with illustrated SAVE NEXT option	8-4
Display after the SAVE operation when there were no results for storing	8-4
Displays after the attempt to overwrite a file if the REPLACE is not active	8-5
FILE window with SAVE OPTIONS text highlighted	8-5
SAVE OPTIONS window; selection of RAM FILE in SLM modes	8-5
SAVE OPTIONS window; selection of REPLACE	8-6
Displays during the file saving when REPLACE is switched off and on	8-6
SAVE OPTIONS window; selection of SAVE STATISTICS	8-6
SAVE OPTIONS window; deactivation of AUTO SAVE option	8-7
Display after attempt of setting AUTO SAVE option with too short INT. PERIOD	8-7
Switching AUTO SAVE on; FILE NAME confirmation and return to FILE window	8-7
Displays after the incorrect file name edition	8-8
Loading a file	8-8
LOAD window with NO FILES message	8-8
Exemplary result files associated with the same logger file (&LOG99)	8-9
Exemplary displays during the loading and checking the contents of a DOSE METER file	8-9
Deleting a file	8-10

RESULT FILES selected to be deleted and the flash memory does not contain any file.....	8-10
Selection of LOGGER FILE to be deleted.....	8-10
SETUP file selected to be deleted.....	8-11
Execution of the @SET3 file deletion.....	8-11
Influence of the execution of the @SET3 file deletion on the memory space.....	8-11
Execution of the @SET4 file deletion and the influence of this process on the memory space.....	8-11
Deleting all files.....	8-12
Execution of defragmentation operation.....	8-13
Message in the case when the execution of DEFRAGMENTATION operation is unnecessary.....	8-13
Result of the FILES DEFRAGMENTATION operation.....	8-13
CATALOGUE text highlighted in FILE window.....	8-13
CATALOGUE window when the memory is empty.....	8-14
Contents of CATALOGUE window.....	8-14
Exemplary result files associated with the same logger file (&LOG99) in the CATALOGUE window.....	8-14
FREE SPACE text highlighted in FILE window.....	8-15
FREE SPACE window after the execution of DELETE ALL operation.....	8-15
FREE SPACE window with the number depending on the measurements and operations performed.....	8-15
SAVE SETUP text highlighted in FILE window.....	8-16
Saving SETUP using SAVE NEXT option.....	8-16
SAVE SETUP window, SAVE option selection.....	8-16
Display during the process of setting the character in the edited name.....	8-16
Display during the selection of the character's position to be edited.....	8-16
Displays during the attempt of overwriting the existing file, changing the name and saving data.....	8-17
Saving SETUP file using SAVE NEXT option.....	8-17
Saving setup with SAVE NEXT option and the message in the case when the file already exists.....	8-18
Displays during and after the execution of the SAVE operation.....	8-18
Displays after the attempt to overwrite a file if REPLACE is active.....	8-18
FILE window with LOAD SETUP text highlighted and LOAD SETUP window with available options.....	8-19
FILE SETUP window; selection the file for loading.....	8-19
Display during the execution of LOAD SETUP operation.....	8-19
STANDARD SETUPS parameters.....	8-20
STANDARD SETUP loading.....	8-20
Display in the main list; SETUP text highlighted.....	9-1
SETUP list of the instrument.....	9-1
SETUP window with LANGUAGE text highlighted and LANGUAGE windows with all available languages.....	9-2
Exemplary displays with the various available language versions of the user interface.....	9-2
SETUP window with CLEAR SETUP text highlighted.....	9-2
Displays with the request for the confirmation for CLEAR SETUP execution.....	9-2
Displays during and after the execution of CLEAR SETUP function.....	9-3
SETUP window with DAY TIME LIMITS text highlighted and displays with available DAY TIME LIMITS.....	9-3
SETUP window with EXPOSURE TIME text highlighted.....	9-3
EXPOSURE TIME setting.....	9-3
SETUP list with EXTERNAL I/O SETUP text highlighted and channel selection in EXT. I/O SETUP window.....	9-4
EXTERNAL I/O SETUP windows; MODE selection in LEFT CHANNEL (a) and RIGHT CHANNEL (b).....	9-4
MEASURE TRIGGER windows; SOURCE selection.....	9-4
EXTERNAL I/O SETUP windows; FUNCTION selected.....	9-5
EXTERNAL I/O SETUP windows; POLARISATION selection.....	9-5
EXTERNAL I/O SETUP windows; ACTIVE LEVEL selection.....	9-5
EXTERNAL I/O SETUP windows; SOURCE selection.....	9-5
EXTERNAL I/O SETUP windows; ALARM LEVEL setting.....	9-6
SETUP window with KEYBOARD text highlighted.....	9-6
KEYBOARD windows; available KEY LOCK settings.....	9-6
Display after the beginning of measurement when the Key lock is ON.....	9-6
Denied access to the files after switching KEY LOCK On.....	9-7
KEYBOARD windows; available SHIFT settings.....	9-7
SETUP window with MICROPHONE text highlighted and MICROPHONE windows; deactivation of COMPENSATION filter.....	9-7

SETUP window with RMS INTEGRATION text highlighted and displays with the available options of RMS INTEGRATION	9-8
SETUP window with RTC text highlighted	9-8
RTC windows with the time selection	9-8
SETUP window with STATISTICAL LEVELS text selected	9-9
STATISTICAL LEVELS windows	9-9
Selection of statistical level (results) in 3 PROFILE mode	9-9
Selection of statistical level (results) in one profile mode in SLM modes	9-10
SETUP window with TIMER text highlighted	9-10
TIMER windows; mode selection	9-10
TIMER windows; setting day of the instrument's switch on	9-11
TIMER windows; setting hour and minute of the instrument's switch on	9-11
TIMER windows; setting REPETITION parameter	9-11
TIMER windows; setting REPETITION parameter (cont.)	9-11
Exemplary settings made for the desired execution of TIMER function	9-12
Counting down during the warming up of the instrument after switching it on	9-12
Displays during the executing of TIMER function (TIMER icon is active)	9-12
SETUP window with WARNINGS text highlighted	9-13
WARNINGS windows; RESULTS NOT SAVED selected	9-13
Displays with LAST RESULTS NOT SAVE warning	9-13