



SVANTEK

INSTRUMENTATION FOR SOUND & VIBRATION
MEASUREMENTS AND ANALYSIS

ISO 9001




SVAN 957

SOUND & VIBRATION ANALYSER

(draft version)

USER'S MANUAL

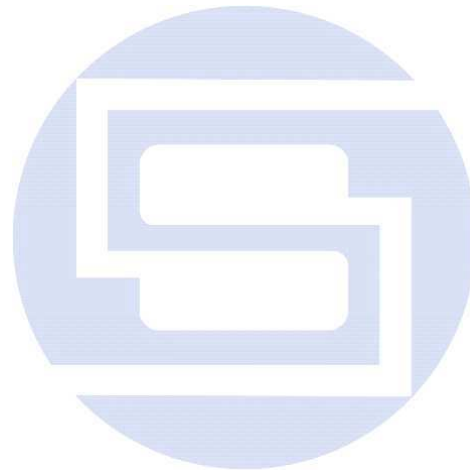

*SVANTEK Sp. z o.o.
WARSAW, September 2007*



Notice: This user's manual presents the software revision named 6.04 / 6.04.03 (cf. the description of the **UNIT LABEL** position of the **DISPLAY** list). The succeeding software revisions (marked with the bigger numbers) can slightly change the view of some displays presented in the text of the manual.

CONTENTS

1 INTRODUCTION	1-1
1.1 SVAN 957 as Sound Level Meter & Analyser	1-1
1.2 SVAN 957 as Vibration Meter & Analyser	1-1
1.3 General features of SVAN 957	1-2
1.4 Accessories included	1-2
1.5 Accessories available	1-2
1.6 Software options available	1-3
1.7 Current list of SVAN 957 options and accessories	1-4
2 MANUAL CONTROL OF THE INSTRUMENT	2-1
2.1 Control push-buttons on the front panel	2-1
2.2 Input and output sockets of the instrument	2-6
3 SETTING THE INSTRUMENT	3-1
3.1 Basis of the instrument's control	3-1
3.2 Powering of the instrument	3-22
3.3 Initial setup of the instrument	3-24
3.4 Selection of the working mode- MODE	3-27
3.5 Activation of optional functions	3-28
3.6 Memory organisation	3-29
4 FUNCTIONS OF THE INSTRUMENT - FUNCTION	4-1
4.1 Selecting the mode of the instrument - MODE	4-1
4.2 Measurement functions of the instrument - MEASUREMENT FUNCTION	4-1
4.3 Instrument's calibration - CALIBRATION	4-2
4.3.1 Calibration BY SENSITIVITY in the case of acoustic signal	4-3
4.3.2 Calibration BY SENSITIVITY in the case of vibration signal	4-4
4.3.3 Calibration BY MEASUREMENT in the case of acoustic signal	4-6
4.3.4 Calibration BY MEASUREMENT in the case of vibration signal	4-7
4.3.5 History of the calibration - LAST CALIBRATION	4-9
4.3.6 Automatic reading of a vibration transducer parameters - TEDS	4-10
5 MEASUREMENT PARAMETERS SETTING - INPUT	5-1
5.1 Selection of measurement parameters - MEASUREMENT SETUP	5-2
5.1.1 Setting time delay before the start of measurements - START DELAY	5-2
5.1.2 Setting the integration period - INTEGR. PERIOD	5-2
5.1.3 Setting the number of repetition of measurement cycles - REP. CYCLE	5-4
5.1.4 Logger functionality switching On / Off - LOGGER	5-4
5.1.5 Setting time period between two writings to the logger's file - LOGGER STEP	5-5
5.1.6 Logger file name edition - LOGGER NAME	5-6
5.2 Measurement range setting - MEASUREMENT RANGE	5-7

5.3	Setting parameters in a profile - PROFILE x	5-8
5.3.1	Weighting filter selection in a profile - FILTER	5-8
5.3.2	RMS detector selection - DETECTOR	5-10
5.3.3	PEAK result selection for saving in a logger's file - LOGGER PEAK	5-10
5.3.4	MAX result selection for saving in a logger's file - LOGGER MAX	5-11
5.3.5	P-P result selection for saving in a logger's file - LOGGER P-P	5-11
5.3.6	MIN result selection for saving in a logger's file - LOGGER MIN	5-12
5.3.7	RMS result selection for saving in a logger's file - LOGGER RMS	5-12
5.4	Triggering mode and parameters selection - TRIGGER SETUP	5-12
5.4.1	Trigger parameters setting - MEASURE TRIGGER	5-13
5.4.2	Trigger parameters in logger setting - LOGGER TRIGGER	5-16
5.4.3	Trigger parameters for recorder setting - RECORDER TRIGGER	5-21
5.5	Selection of dose meter parameters - DOSIMETER SETUP	5-23
5.5.1	Setting criterion sound level - CRITERION LEVEL	5-23
5.5.2	Setting criterion sound level - THRESHOLD LEVEL	5-23
5.5.3	Setting criterion sound level - EXCHANGE RATE	5-24
5.6	Selection of FFT analysis parameters - FFT	5-24
5.6.1	The averaging of spectra in the FFT analysis - AVERAGING	5-25
5.6.2	Selecting the weighting filter during the FFT analysis - FILTER	5-25
5.6.3	Selecting the analysis band of the signal - BAND	5-25
5.6.4	Selecting the time window for the FFT analysis - WINDOW	5-26
5.6.5	Selecting the number of the lines of FFT analysis - LINES	5-26
5.6.6	Enabling the FFT spectra time history logging - LOGGER	5-26
5.7	Selection of 1/1 octave and 1/3 octave spectrum parameters - SPECTRUM	5-26
5.7.1	Selecting the weighting filter during 1/1 OCTAVE or 1/3 OCTAVE analysis - FILTER	5-27
5.7.2	Selecting the band during the 1/1 OCTAVE or 1/3 OCTAVE analysis - BAND	5-27
5.7.3	Activation of logger for 1/1 OCTAVE or 1/3 OCTAVE analysis results - LOGGER	5-28
6	DATA AVAILABLE ON THE DISPLAY - DISPLAY	6-1
6.1	Selection of the modes of measurement results presentation - DISPLAY MODES	6-1
6.1.1	Switching on/off spectrum view - SPECTRUM	6-8
6.1.2	Switching on/off three profiles view - 3 PROFILES	6-9
6.1.3	Setting on/off statistics view in SM - STATISTICS	6-11
6.1.4	Setting on/off logger view - LOGGER	6-13
6.1.5	Setting on/off the view of the file description - FILE INFO	6-13
6.2	Setting the parameters of the graphical modes - DISPLAY SETUP	6-14
6.2.1	Setting the scale of the presentation and the display's grid - DISPLAY SCALE	6-14
6.2.2	Selection of the Spectrum Type in VM - SPECTRUM TYPE	6-17
6.2.3	Setting the parameters of the logger files presentation - SPECTRUM VIEW	6-17
6.2.4	Selection of the Weighting Filters - TOTAL VALUES	6-19
6.2.5	Setting the parameters of the logger files presentation - LOGGER VIEW	6-20
6.3	Selection of the logger's file to the display presentation - LOGGER VIEW	6-22
6.4	Setting the parameters of the display - SCREEN SETUP	6-24
6.4.1	Setting the contrast of the display - CONTRAST	6-24
6.4.2	Automatic switch off of the backlight - BACKLIGHT TIMEOUT	6-25

6.5	Checking the state of the internal battery - BATTERY	6-25
6.6	Checking specification of the instrument - UNIT LABEL	6-25
7	SAVING THE MEASUREMENT RESULTS - FILE	7-1
7.1	Saving files in the instrument's memory - SAVE and SAVE NEXT	7-3
7.2	Controlling the data storing in the instrument's memory - SAVE OPTIONS	7-10
7.2.1	Saving data starting from the same address - RAM FILE	7-10
7.2.2	Replacement of the existing files by the new ones - REPLACE	7-11
7.2.3	Controlling the measurement statistics savings - SAVE STATISTICS	7-11
7.2.4	Controlling the measurement results savings - AUTO SAVE	7-12
7.2.5	Direct access to the SAVE / SAVE NEXT function - DIRECT SAVE	7-15
7.2.6	Saving maximum values in the spectrum - SAVE MAX SPECT.	7-16
7.2.7	Saving the lowest values in the spectrum - SAVE MIN SPECT.	7-17
7.3	Loading the files with the measurement results - LOAD	7-17
7.4	Removing a file with the measurement results from memory - DELETE	7-20
7.4.1	Deleting files with the main results - RESULT FILES	7-20
7.4.2	Deleting logger files - LOGGER FILES	7-22
7.4.3	Deleting files with setup settings - SETUP FILES	7-24
7.5	Removing all files with measurement results from memory - DELETE ALL	7-26
7.5.1	Deleting all result files - RESULT FILES	7-26
7.5.2	Deleting all logger files - LOGGER FILES	7-27
7.5.3	Deleting all setup files - SETUP FILES	7-28
7.6	Merging file space - DEFRAGMENTATION	7-30
7.6.1	Merging result and setup files memory - FILES DEFRAGMENTATION	7-30
7.6.2	Merging logger files memory - LOGGER DEFRAGMENT.	7-32
7.7	Checking the contents of the memory - CATALOGUE	7-33
7.8	Checking the free space in the memory - FREE SPACE	7-35
7.9	Saving setup files in the instrument's memory - SAVE SETUP	7-36
7.10	Loading the files with the setup settings - LOAD SETUP	7-39
7.11	Connecting the external USB memory stick- DIRECTORY	7-41
7.12	Copying files to the external USB memory stick- COPY FILES TO USB	7-42
7.13	Moving files to the USB memory stick- MOVE FILES TO USB	7-43
8	REPORTS PRINTING - REPORT	8-1
8.1	Edition of the user's text to be added to the reports - TITLE	8-3
8.2	Printing of the measurement results - PRINT RESULTS	8-4
8.3	Printing of the statistics of sound measurement results - PRINT STATISTICS	8-8
8.4	Printing of the measurement results from the selected file - PRINT FILE	8-12
8.5	Printing of the logger results - PRINT LOGGER	8-17
8.6	Printing of the coefficients of the user filters - PRINT USER FILTERS	8-17
8.7	Printing of the file's catalogue - PRINT CATALOGUE	8-19
8.8	Selection of the printing options - OPTIONS	8-21
8.9	Selection of the format of the print out - FORMAT	8-21

8.10	Controlling the paper ejection after print out - EJECT P.	8-22
9	SETUP MENU - SETUP	9-1
9.1	Setting the language of the user interface - LANGUAGE	9-2
9.2	Return to the factory settings - CLEAR SETUP	9-5
9.3	Compensation filter selection- COMPENSATION FILTER	9-5
9.4	Day time limits selection - DAY TIME LIMITS	9-6
9.5	Exposure time setting - EXPOSURE TIME	9-7
9.6	Setting parameters of the Ext. I/O port - EXTERNAL I/O SETUP	9-8
9.6.1	Mode selection of the Ext. I/O port - MODE	9-8
9.6.2	Digital output function selection of the I/O socket - FUNCTION	9-9
9.6.3	Polarisation selection of the digital output signal - POLARISATION	9-10
9.6.4	Active level selection of the digital output signal - ACTIVE LEVEL	9-10
9.6.5	Source signal selection for the alarm pulse generation - SOURCE	9-10
9.6.6	Alarm level selection on the digital output of I/O - ALARM LEVEL	9-11
9.7	Activation of human vibration filters - HUMAN VIB. FILT.	9-11
9.8	Selection of the current IEPE supply - IEPE CURRENT	9-12
9.9	Reference signal in vibration measurements - REFERENCE LEVELS	9-12
9.9.1	Setting the reference level of the acceleration signal - ACC	9-12
9.9.2	Setting the reference level of the velocity signal - VEL	9-13
9.9.3	Setting the reference level of the displacement signal - DIL	9-13
9.10	Parameters of remote communication - REMOTE COMMUNICATION	9-14
9.10.1	Selecting the type of remote communication - TYPE	9-14
9.10.2	Setting the packet size of the remote communication - PACKET	9-14
9.11	Detector's type selection in the LEQ calculations - RMS INTEGRATION	9-14
9.12	Setting the parameters of the serial interface - RS232	9-15
9.12.1	Setting the transmission speed of the serial interface - BAUD RATE	9-16
9.12.2	Setting time limit for the performance of serial interface operation - TIME OUT	9-16
9.13	Programming the instrument's internal Real Time Clock - RTC	9-17
9.14	RT 60 averaging function - RT60 AVERAGING	9-17
9.14.1	RT 60 averaging - AVERAGING	9-18
9.14.2	Resetting the averaging process - AVERAGING CLEAR	9-18
9.14.3	RT 60 averaging number - AVERAGING NO.	9-18
9.15	Setting the auxiliary parameters of RT 60 mode - RT60 OPTIONS	9-19
9.15.1	Setting the sound pressure level decay curve averaging - SMOOTHING	9-19
9.15.2	Setting the margin value of background noise level - NOISE MAR.	9-19
9.16	Selection of RT60 results parameters - RT60 RESULTS	9-20
9.17	Selection of few push-buttons mode - SHIFT MODE	9-21
9.17.1	<SHIFT> / <ALT> push-button working mode selection - SHIFT	9-21
9.17.2	<START / STOP> push-button working mode selection - ST/SP	9-21
9.17.3	Setting ten statistical levels - STATISTICAL LEVELS	9-22
9.18	Programming the instrument's internal timer - TIMER	9-23
9.18.1	Selecting the mode of the timer function - MODE	9-23

9.18.2	Setting day of the instrument's switch on - START DAY	9-24
9.18.3	Setting hour of the instrument's switch on - START HOUR	9-24
9.18.4	Selecting the start hours for four irregular automatic measurements - TIME _x	9-24
9.18.5	Selecting the period between two consecutive measurements - REPETITION	9-25
9.18.6	Description of the exemplary timer function execution	9-25
9.19	Selection the USB-HOST port functionality - USB-HOST PORT	9-26
9.20	Setting the coefficients of the user filters - USER FILTERS	9-29
9.20.1	Setting filter coefficients for octave analysis - SPECTRUM BASED FILTERS	9-29
9.21	Selection of the vibration units - VIBRATION UNITS	9-32
9.22	Warnings selection - WARNINGS	9-32
9.22.1	Saving the measurement results in a file - RESULTS NOT SAVED	9-33
9.22.2	Checking free space on the USB disk - USB DISK FREE SP.	9-33
9.22.3	Minimum USB disk memory free space setting - MIN FREE SPACE	9-34
A.	REMOTE CONTROL	A-1
A.1.	Input / Output transmission types	A-1
A.2.	Function #1 – Input / Output of the control setting codes	A-1
A.3.	Function #2 – Measurement results read-out in the level meter or dose meter modes	A-4
A.4.	Function #3 – Read-out of the measurement results in 1/1 OCTAVE or 1/3 OCTAVE mode	A-6
A.5.	Function #4 – Read-out of the data file from the internal Flash-Disc	A-7
A.6.	Function #5 – Statistical analysis results read-out	A-8
A.7.	Function #6 – Remote setting of the user filters	A-9
A.8.	Function #7 – Special control functions	A-10
A.9.	Function #9 – Write-in of the data file into the internal Flash-Disc	A-16
A.10.	Control setting codes	A-16
B.	DATA FILE STRUCTURES	B-1
B.1.	Structure of the SVAN 957 file	B-1
B.2.	Structure of the file containing results from logger's file	B-21
B.2.1	The contents of the files in the logger	B-21
B.3.	Structure of the file with the results from the SLM mode	B-23
B.4.	Structure of the file with the results from the VLM mode	B-23
B.5.	Structure of the file with the results from the DOSE METER mode	B-24
B.6.	Structure of the file with 1/1 OCTAVE analysis results	B-24
B.7.	Structure of the file with 1/3 OCTAVE analysis results	B-24
B.8.	Structure of the file with the FFT analysis results	B-25
B.9.	Structure of the file containing RT60 functions results	B-25
B.10.	Structure of the SETUP file	B-26
B.11.	DATE and TIME	B-26
C.	DATA SPECIFICATIONS	C-1
C.1.	Specification of SVAN 957 as sound level meter	C-1
C.2.	Specification of SVAN 957 as 1/1 OCTAVE, 1/3 OCTAVE and FFT sound analyser	C-26

C.3. Specification of SVAN 957 as vibration level meter	C-27
C4. Miscellaneous specification of SVAN 957	C-31
D. DEFINITIONS AND FILTER CHARACTERISTICS	D-1
D.1 Definitions and formulae	D-1
D.1.1 Basic symbols and notation	D-1
D.1.2 Definitions of the quantities measured in sound mode	D-2
D.1.3 Definitions of the results measured in dosimeter mode	D-6
D.1.4 Definitions of the quantities measured in vibration mode	D-8
D.2 Frequency characteristics of the implemented digital filters	D-9
D.2.1 Digital weighting filters implemented in sound mode	D-9
D.2.2 Digital weighting filters implemented in vibration mode	D-14
D.2.3 Digital HP filter implemented in 1/1 & 1/3 OCTAVE and FFT analysis	D-27
D.2.4 Digital 1/1 OCTAVE and 1/3 OCTAVE filters implemented in the SVAN 957	D-27

LIST OF FIGURES

SVAN 957 instrument with microphone and microphone preamplifier	1-3
Control push-buttons of the SVAN 957 instrument	2-1
Display with “MARKERS” (after pressing <ALT> and <SHIFT> together)	2-5
Displays with the activated markers	2-5
Time history plot with the indication of the active markers	2-5
Top cover of SVAN 957 instrument in 1:1 scale	2-6
Bottom cover of SVAN 957 instrument in 1:1 scale	2-6
Front panel of SVAN 957 instrument in 1:1 scale	2-7
Rear panel of SVAN 957 instrument in 1:1 scale	2-8
Displays with the highlighted elements of the main list	3-1
Display with the recently accessed menu items (after double pressing of the <MENU> push-button)	3-1
Displays with the main list (a) and the elements of INPUT list (b)	3-2
MEASUREMENT SETUP window opened (path: MENU / INPUT / MEASUREMENT SETUP)	3-2
MEASUREMENT SETUP window; INTEGR. PERIOD position accessible	3-2
Displays with the accessed INTEGR. PERIOD position after pressing the <<> or <>> push-buttons, respectively	3-2
Displays after three consecutive pressing of the <ESC> push-button from MEASUR. SETUP sub-list	3-2
Displays during and after the accessing FREE SPACE window (path: MENU / FILE / FREE SPACE)	3-3
Displays during the edition of the text, which has to be printed as a header in the measurement reports (path: MENU / REPORT / TITLE)	3-3
Control diagram of FUNCTION list	3-4
Control diagram of INPUT list in 1/1 OCTAVE and 1/3 OCTAVE mode	3-7
Control diagram of INPUT list in DOSE METER mode	3-7
Control diagram of INPUT list in FFT mode	3-7
Control diagram of INPUT list in LEVEL METER mode	3-8
Control diagram of DISPLAY SETUP list in 1/1 OCTAVE and 1/3 OCTAVE analysis of sound	3-10
Control diagram of DISPLAY SETUP list in 1/1 OCTAVE and 1/3 OCTAVE analysis of vibration	3-11
Control diagram of DISPLAY list	3-12
Control diagram of FILE list	3-15
Control diagram of REPORT list	3-16
Control diagram of SETUP list in RT60 mode	3-19
Control diagram of SETUP list in sound mode	3-22
BATTERY windows with different sources powering the instrument: SA 15 external DC power adapter (a), SA 17A external battery pack (b), internal batteries (c) and USB power (d)	3-22
Displays with “Battery” icon (a) and in the BATTERY window (path: MENU / DISPLAY / BATTERY) (b)	3-23
Display with LOW BATTERY message	3-23
Displays with “Computer” icon (a) and in BATTERY window (b)	3-23
SCREEN SETUP windows; BACKLIGHT TIMEOUT activation	3-24
Displays after switching on the instrument in sound (b) or vibration mode (c)	3-24
Displays in one profile (a) and 3 PROFILES display mode (b) with SLM measurement results	3-24
Displays in one profile (a) and 3 PROFILES display mode (b) with VLM measurement results	3-24
Displays in 3 PROFILES display mode with the measurements results, which are from LEVEL METER mode (continuous lines) (b) and with the results, which are not from LEVEL METER (dotted lines)	3-25
Display with all available icons	3-26
Display with “Paper sheet” and “Battery” icons	3-26
Display with “Computer” icon	3-26
Display with “Antenna” (“Tree”) icon	3-26
Display with “Loudspeaker” icon	3-26
Displays with “Headphone”, “Envelope” and “Bell” icons	3-27
Displays with “Timer” and “Arrows” icons	3-27
FUNCTION list opened, MODE selected (a) and MODE sub-list opened with all available modes (b), (c)	3-27
Displays with FUNCTION list opened in SM, MEASUREMENT FUNCTION selected (a) and MEASUR. FUNCTION sub-list opened with all available options (b), (c), (d), (e), (f) and (g)	3-28
Displays during the entering of the access code to a function	3-28
Display after the unsuccessful verification of the access code	3-28

Scheme of the instrument's memory organisation without the USB-HOST	3-29
Scheme of the instrument's memory organisation with the USB-HOST and memory stick connected	3-30
Displays with the main list; FUNCTION text selected (a) and FUNCTION list opened; MODE selected (b) MEASUREMENT FUNCTION selected (c) and CALIBRATION selected (d)	4-1
FUNCTION list opened; MODE selected (a) and MEASUR. FUNCTION sub-list opened with vibration meter mode selected (b) and sound meter mode selected (c)	4-1
MEASUREMENT FUNCTION windows opened in SM (a), in VM (b) and the activation of the optional function (c)	4-2
Displays with the main list; FUNCTION text selected (a), FUNCTION list opened, CALIBRATION text selected (b)	4-3
Displays with the selected calibration mode and after entering this mode	4-3
SENSITIVITY position (path: MENU / FUNCTION / CALIBRATION / BY SENSITIVITY) not accessible	4-3
Displays during setting the sensitivity higher than 50.0 mV / Pa (a) and after pressing <ENTER> push-button with the calibration factor calculated (b)	4-4
Displays during setting the sensitivity lower than 50.0 mV / Pa with the calculated calibration factor	4-4
Displays with the lowest possible sensitivity and the highest calibration factor (a) and the highest sensitivity and the lowest calibration factor (b)	4-4
Displays with the selected calibration mode and after entering this mode	4-4
SENSITIVITY position (path: MENU / FUNCTION / CALIBRATION / BY SENSITIVITY) not accessible	4-5
Displays during setting the sensitivity higher than 10.0 mV / ms ⁻² (a) and after pressing the <ENTER> push- button with the calibration factor calculated (b)	4-5
Displays during setting the sensitivity lower than 10.0 mV / ms ⁻² (a) and after pressing the <ENTER> push- button with the calibration factor calculated (b)	4-5
Displays with the lowest possible sensitivity and the highest calibration factor (a) and the highest sensitivity and the lowest calibration factor (b)	4-5
Displays during the calibration measurement	4-6
Displays after the measurements (a) and after the acceptance of the value of the calibration factor (b)	4-7
Displays with the question about switching on the compensation filter	4-7
Displays with the selected calibration mode and after entering this mode	4-7
Displays while the instrument is waiting for the calibration measurement to commence	4-8
Displays during the calibration measurements	4-8
Displays after the calibration measurements	4-8
Displays after pressing <ENTER> push-button (after calculation of the calibration factor value)	4-8
Displays in CALIBRATION window; LAST CALIBRATION text selected (a) LAST CALIBRATION window opened with ten calibration records (b)	4-9
Displays with LAST CALIBRATION records	4-9
Display with the empty LAST CALIBRATION window	4-9
CALIBRATION window; TEDS text highlighted	4-10
TEDS window opened; NO DATA AVAILABLE message	4-10
Main list with INPUT text selected	5-1
INPUT list in LEVEL METER (a), in 1/1 OCTAVE and 1/3 OCTAVE analyser (b), in DOSE METER (c), and in FFT analyser (d)	5-1
Displays with not active sub-lists of INPUT list during measurement	5-1
Displays with MEASUREMENT SETUP window	5-2
MEASUREMENT SETUP windows; the setting of START DELAY with 1-second step	5-2
MEASUREMENT SETUP windows; the setting of START DELAY with 10-seconds step	5-2
MEASUREMENT SETUP windows; the setting of INTEGR. PERIOD with 1-second step	5-3
MEASUREMENT SETUP windows; the setting of INTEGR. PERIOD with 10-seconds step	5-3
MEASUREMENT SETUP windows; the setting of INTEGR. PERIOD with 1 and 10-minutes step	5-3
MEASUREMENT SETUP windows; the setting of INTEGR. PERIOD with 10-hours step	5-3
Displays during setting the predefined INTEGR. PERIOD sequence	5-3
Display, when INT.PERIOD is too short for AUTO SAVE option	5-4
REP. CYCLE setting with the step equal to one	5-4
REP. CYCLE setting with the step equal to 20	5-4
Displays with LOGGER deactivated and activated	5-5
Displays during setting LOGGER STEP; available values in a sequence 1, 2, 5	5-5
LOGGER STEP setting; available values in milliseconds	5-5
LOGGER STEP setting; available values from 500 milliseconds to 1 hour	5-5
LOGGER NAME edition in MEASUREMENT SETUP	5-6

Displays during the attempt of overwriting the existing file	5-6
Relations between INTEGR. PERIOD and LOGGER STEP	5-7
INPUT list with MEASUREMENT RANGE selected	5-7
MEASUREMENT RANGE windows in sound mode; RANGE selection	5-7
MEASUREMENT RANGE windows in vibration mode, RANGE selection	5-8
Displays with change of the default range values in sound mode caused by the calibration factor	5-8
Displays with change of the default range values in vibration mode caused by the calibration factor	5-8
INPUT list with PROFILE 1, PROFILE 2 and PROFILE 3 selected	5-8
PROFILE(x) windows; the selection of the weighting filter in SM	5-9
PROFILE(1) windows; the selection of the weighting filter in acceleration measurements	5-9
PROFILE(1) windows; the selection of the weighting filter in velocity measurements	5-9
PROFILE(1) windows; the selection of the weighting filter in displacement measurements	5-9
PROFILE(x) windows (SM); the selection of RMS detector	5-10
PROFILE(1) windows (vibration mode); the selection of RMS detector	5-10
PROFILE(x) windows (sound mode); PEAK result to be not saved or saved in a logger's file	5-10
PROFILE(x) windows (vibration); PEAK result to be not saved or saved in a logger's file	5-11
PROFILE(x) windows (SM); MAX result to be not saved or saved in a logger's file	5-11
PROFILE(x) windows (VM); MAX result to be not saved or saved in a logger's file	5-11
PROFILE(x) windows; P-P result to be not saved or saved in a logger's file	5-11
PROFILE(x) windows; MIN result to be not saved or saved in a logger's file	5-12
PROFILE(x) window (SM); RMS result to be not saved or saved in a logger's file	5-12
PROFILE(x) windows (VM); RMS result to be not saved or saved in a logger's file	5-12
TRIGGER SETUP selected in INPUT list and TRIGGER SETUP window	5-12
MEASURE TRIGGER windows	5-13
MEASURE TRIGGER window; TRIGGER switched off	5-13
Displays during the measurements while the triggering condition is not fulfilled	5-13
MEASURE TRIGGER windows with SLOPE modes selected	5-13
MEASURE TRIGGER windows with LEVEL modes selected	5-14
MEASURE TRIGGER window with GRAD + mode selected	5-14
MEASURE TRIGGER windows with not active SOURCE signal line	5-14
MEASURE TRIGGER windows with SOURCE signal selection	5-15
MEASURE TRIGGER windows with LEVEL selection in SLOPE + mode	5-15
MEASURE TRIGGER windows with LEVEL selection in SLOPE – mode (10 dB step down)	5-15
MEASURE TRIGGER windows with LEVEL selection in LEVEL + mode (1 dB step up)	5-15
MEASURE TRIGGER windows with LEVEL selection in LEVEL – mode (1 dB step up)	5-15
MEASURE TRIGGER windows with LEVEL selection in GRAD + mode (1 dB step down)	5-16
MEASURE TRIGGER windows with the GRADIENT selection (1 dB/ms and 10 dB/ms step up)	5-16
MEASURE TRIGGER windows with GRADIENT selection (10 dB/ms up and 1 dB/ms down)	5-16
LOGGER SETUP windows in sound mode	5-17
LOGGER SETUP windows in vibration mode	5-17
LOGGER TRIGGER windows with the not active SOURCE signal line in sound mode	5-17
LOGGER TRIGGER windows with the not active SOURCE signal line in vibration mode	5-17
LOGGER TRIGGER windows with LEVEL selection (1 dB step up) in sound mode	5-17
LOGGER TRIGGER windows with LEVEL selection (1 dB step up) in sound mode	5-18
LOGGER TRIGGER windows with LEVEL selection in vibration mode (1 dB step up)	5-18
LOGGER TRIGGER windows with LEVEL selection (10 dB step up) in sound mode	5-18
LOGGER TRIGGER windows with LEVEL selection (10 dB step up) in vibration mode	5-18
LOGGER TRIGGER windows with LEVEL selection (10 dB step up) in vibration mode	5-19
LOGGER TRIGGER windows with PRE selection in sound mode	5-19
LOGGER TRIGGER windows with PRE selection in vibration mode	5-19
LOGGER TRIGGER windows with PRE selection for different LOGGER STEPS	5-19
LOGGER TRIGGER windows with POST selection	5-20
LOGGER TRIGGER windows with POST selection for different LOGGER STEPS	5-20
LOGGER TRIGGER windows with POST selection for different LOGGER STEPS in vibration mode	5-20
TRIGGER SETUP window; RECORDER TRIGGER text highlighted	5-21
RECORDER TRIGGER windows; TRIGGER selection	5-21
RECORDER TRIGGER windows; the source selection for SLOPE + (a) and SLOPE – (b)	5-21
RECORDER TRIGGER windows with LEVEL selection (1 dB step up)	5-22

RECORDER TRIGGER windows with LEVEL selection in vibration mode, level expressed in linear units, 1 dB step up (a) and 10 dB step up (b)	5-22
RECORDER TRIGGER windows with LEVEL selection in sound and vibration mode (10 dB step up)	5-22
RECORDER TRIGGER windows with GRADIENT selection (1 dB step up)	5-22
RECORDER TRIGGER windows with GRADIENT selection (10 dB step up)	5-23
DOSIMETER SETUP selected in INPUT list and DOSIMETER SETUP window	5-23
DOSIMETER SETUP windows; CRITERION LEVEL selection	5-23
DOSIMETER SETUP windows; THRESHOLD LEVEL selection	5-24
DOSIMETER SETUP windows; EXCHANGE RATE selection	5-24
FFT selected in INPUT list and FFT window opened in sound mode (a) and in vibration mode (b)	5-24
FFT window; FILTER selection in sound mode	5-25
FFT window; BAND selection	5-25
FFT sublist; WINDOW selection	5-26
FFT window; LINES selection	5-26
FFT window; LOGGER activation	5-26
SPECTRUM selected in INPUT list and SPECTRUM window opened in sound mode (a) and in vibration mode (b)	5-27
SPECTRUM window; FILTER selection in sound mode	5-27
SPECTRUM window; BAND selection in sound mode	5-28
SPECTRUM window; LOGGER selection	5-28
Display in the main list; DISPLAY text highlighted (displayed inversely)	6-1
DISPLAY list	6-1
DISPLAY MODES windows in SM	6-2
DISPLAY MODES windows in VM	6-2
Display in LOGGER mode when there is nothing to be displayed there (after setting LOGGER as active)	6-3
Measurement results in SM, made with linear integration, presented in one profile mode	6-3
Measurement results in VM presented in one profile mode	6-4
Measurement results, made with exponential integration in SM, presented in one profile mode	6-4
Measurement results, made with exponential integration in SM, saved in the file named MAR11, presented in one profile mode	6-4
Displays with the statistics made with linear integration presented in one profile mode	6-5
Displays with the statistics made with exponential integration presented in one profile mode	6-5
Measurement results in SM and unknown profile presented with the biggest fonts in one profile mode	6-6
Measurement results in VM and unknow profile presented with the biggest fonts in one profile mode	6-6
Displays during the measurement performed in SOUND LEVEL METER mode with the active LOGGER (an envelope icon)	6-6
Displays during the measurement performed in VM with the active LOGGER (an envelope icon)	6-7
Displays after stopping the measurements with the name of the logger's file the data are saved	6-7
Measurement results from DOSE METER, made with exponential integration, presented in one profile mode	6-8
DISPLAY MODES windows in SM; SPECTRUM position accesible	6-8
DISPLAY MODES windows in VM	6-8
Displays in SPECTRUM mode for 1/1 OCTAVE (a), 1/3 OCTAVE (b) and FFT (c)	6-9
Setting on and off the accessibility of three profiles presentation mode	6-9
Measurement results in 3 PROFILES mode	6-9
Results in 3 PROFILES mode (SM); selection of the result in a profile	6-10
Results in 3 PROFILES mode (VM); selection of the result in a profile	6-10
Results in 3 PROFILES mode; selection of the profile	6-10
Displays with the statistics made with linear integration presented in 3 PROFILES mode	6-10
Displays during the measurement performed in SM with the active LOGGER	6-11
Displays during the measurement performed in LEVEL METER mode with the active LOGGER (the first three) and after saving the results (the last one)	6-11
Setting on (a) and off (b) the accessibility of statistics presentation mode	6-11
Results presented in the statistics presentation mode	6-12
Instrument's default Lxx levels presented in the graphical form	6-12
Results presented in both statistic presentation modes	6-12
Results presented in both statistic presentation modes during the measurements	6-12
Setting on and off the accessibility of LOGGER presentation mode	6-13
Exemplary displays with the measurement results saved in the logger	6-13
Setting on and off the file description presentation mode	6-13

Exemplary contents of the FILE INFO window	6-13
DISPLAY list with the DISPLAY SETUP selected	6-14
DISPLAY SETUP windows in SLM (a), in VLM (b) in FFT (SM) (c) and in 1/1 and 1/3 OCTAVE (VM) (d)	6-14
Displays with the possible options of the vibration SCALE	6-14
Measurement results (VM) presented in linear (a) and logarithmic (b) scale	6-15
Displays with the possible values of the DYNAMIC parameter	6-15
Displays with the results stored in the logger presented with different DYNAMIC parameter	6-15
DISPLAY SCALE windows; the X-ZOOM selection	6-15
Displays in 1/1 OCTAVE SPECTRUM 3x, 4x, and 5x X-ZOOM	6-15
Displays in 1/3 OCTAVE SPECTRUM 2x, 3x, 4x, and 5x X-ZOOM	6-16
Displays in FFT SPECTRUM 1x, 2x, 3x, 4x, and 5x X-ZOOM	6-16
Displays with the grid switched on and off	6-16
Displays with the grid switched on and off	6-16
Displays with the autoscale switched on and off	6-17
DISPLAY SETUP window; the SPECTRUM TYPE text highlighted	6-17
SPECTRUM TYPE windows with the available values	6-17
DISPLAY SETUP window; SPECTRUM VIEW text highlighted	6-18
SPECTRUM VIEW windows; VIEW selection	6-18
SPECTRUM VIEW windows; TYPE selection	6-18
SPECTRUM VIEW windows, MAX selection	6-18
SPECTRUM VIEW windows; MIN selection	6-19
DISPLAY SETUP window; the TOTAL VALUES text highlighted	6-19
TOTAL VALUES windows; the weighting filters selection in SM	6-19
TOTAL VALUES windows in VM; the TOTALx selected	6-19
TOTAL x windows; the weighting filters selection in VM	6-20
TOTALx windows; TYPE selection	6-20
TOTALx windows; CALIBRATION FACTOR setting	6-20
DISPLAY SETUP windows, LOGGER VIEW text highlighted	6-21
LOGGER VIEW windows with the possible values of VIEW parameter	6-21
Displays with the possible values of VIEW parameter	6-21
LOGGER VIEW windows with the possible values of TIME parameter	6-21
Displays with the possible values of TIME parameter	6-21
DISPLAY list; LOGGER VIEW text highlighted	6-22
Displays in LOGGER VIEW sub-list	6-22
Displays in LOGGER VIEW sub-list; the selection of the file to be seen	6-22
Displays in LOGGER VIEW sub-list; the scrolling of the file to be seen	6-22
Display in LOGGER VIEW sub-list in the case when the files do not exist	6-23
Displays with the selected logger's file; the change of the cursor position	6-23
Displays with the selected logger's file; the scrolling to the right	6-23
Displays with the selected logger's file; the scrolling to the left	6-23
Displays with the selected logger's file; the change of the axis relation	6-23
Displays with the selected logger's file; the change of the profile	6-24
Displays with the selected logger's file; the change of the result from a profile	6-24
DISPLAY list; the SCREEN SETUP text highlighted	6-24
SCREEN SETUP windows; the change of the contrast	6-24
SCREEN SETUP windows; BACKLIGHT TIMEOUT active (a), and not active (b)	6-25
DISPLAY window with BATTERY text highlighted	6-25
BATTERY windows for different sources powering the instrument	6-25
DISPLAY list; UNIT LABEL text highlighted	6-26
UNIT LABEL windows opened and after scrolling with the <▲>, <▼> push-buttons	6-26
Main list; the FILE text highlighted (displayed inversely)	7-2
FILE list of the instrument	7-3
SAVE window in FILE list	7-3
Display during the process of setting the character in the edited name	7-4
Display during the selection of the character's position to be edited	7-4
Display during the selection of the character	7-4
FILE NAME edition after pressing the <SHIFT> and <▶> push-buttons	7-4
FILE NAME edition after pressing the <SHIFT> and <◀> push-buttons	7-4
Displays during the attempt of overwriting the existing file, changing the name and saving data	7-5

Displays in the simplified edition of the file name and the execution of the saving operation	7-5
Displays in the simplified edition of the file name, saving and the “saturation” of that operation	7-5
Displays after the attempt to perform unavailable saving operation and the return to SAVE NEXT	7-6
Display after SAVE operation when there were no results for storing	7-6
View of all displays during and after the execution of SAVE operation	7-6
Displays after the attempt to overwrite a file if REPLACE is not active	7-6
Settings and FILE INFO after the performed measurements	7-7
FREE SPACE window before and after saving the @EXAMP1 file	7-7
Settings and FILE INFO after the performed measurements	7-7
FREE SPACE window before and after saving the @EXAMP2 file	7-8
Settings before the execution of the measurements	7-8
Settings for the current measurements	7-8
FILE INFO during and after the measurements	7-8
FREE SPACE window before and after saving the @EXAMP3 and &LOG100 files	7-9
Settings before the execution of the measurements	7-9
Settings and FILE INFO during and after the measurements	7-9
FREE SPACE window before and after saving the @EXAMP4 and &LOG100 files	7-9
FILE list with the SAVE OPTIONS text highlighted (displayed inversely)	7-10
SAVE OPTIONS sub-list; the selection of the RAM FILE	7-10
SAVE OPTIONS sub-list; the selection of REPLACE	7-11
SAVE OPTIONS window without RAM FILE position; the selection of REPLACE	7-11
Displays during the file saving when REPLACE is switched off and on	7-11
SAVE OPTIONS sub-list; the selection of SAVE STATISTICS	7-12
SAVE OPTIONS window without RAM FILE position; the selection of SAVE STATISTICS	7-12
SAVE OPTIONS sub-list; the selection of AUTO SAVE	7-12
SAVE OPTIONS sub-list; the selection of AUTO SAVE in DOSIMETER	7-13
Displays during the execution of AUTO SAVE switching on; FILE NAME skipping and return to SAVE OPTION sub-list	7-13
Display after attempt of switching on AUTO SAVE option with too short INT. PERIOD	7-13
Displays during the execution of AUTO SAVE switching on; FILE NAME confirmation and return to FILE list	7-13
Displays after the incorrect file name edition	7-14
Measurement results (SM) presented after pressing the <▲> or <▼> push-buttons	7-14
Measurement results (VM) presented after pressing the <▲> or <▼> push-buttons	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons	7-15
SAVE OPTIONS sub-list; the selection of DIRECT SAVE	7-15
SAVE OPTIONS window without RAM FILE position; the selection of DIRECT SAVE	7-15
Display after the attempt to perform an unavailable operation during measurement in progress	7-16
Exemplary executions of the software with DIRECT SAVE not active	7-16
Exemplary executions of the software with DIRECT SAVE active	7-16
SAVE OPTIONS sub-list; the selection of SAVE MAX SPECT. in SM (a) and in VM (b)	7-16
SAVE OPTIONS sub-list; the selection of SAVE MIN SPECT. in SM (a) and in VM (b)	7-17
FILE list with LOAD text highlighted (displayed inversely)	7-17
Display after the attempt to perform an unavailable operation during measurement in progress	7-18
Display during the execution of LOAD operation	7-18
Exemplary contents of LOAD window	7-18
Exemplary result files associated with the same logger file (&LOG2)	7-19
Display during the execution of the loading function	7-19
Displays after the execution of LOAD operation	7-19
Exemplary displays during the loading and checking the contents of a DOSE METER file	7-19
Exemplary displays during the loading and checking the contents of a LEVEL METER file	7-19
Exemplary displays during the loading and checking the contents of a LEVEL METER file (cont.)	7-20
FILE list with DELETE text highlighted (displayed inversely)	7-20
RESULT FILES selected to be deleted and the flash memory does not contain any file	7-20
Display after the attempt to perform an unavailable operation during measurement in progress	7-21
Selection of RESULT FILES to be deleted	7-21
Execution of RESULT FILES deletion	7-21

Execution of the @EXAMP4 file deletion and the influence of this process on the memory space	7-22
Execution of the @EXAMP5 file deletion and the influence of this process on the memory space	7-22
LOGGER FILES selected to be deleted and the memory does not contain any file	7-22
Display after the attempt to perform an unavailable operation during measurement in progress	7-23
Selection of LOGGER FILES to be deleted	7-23
Execution of LOGGER FILES deletion	7-23
Execution of the &LOG107 file deletion from the logger memory and its influence on the memory space (LOGGER AVAILABLE)	7-24
Execution of the &LOG113 file deletion and the influence of this process on the memory space	7-24
SETUP FILES selected to be deleted and the instrument's memory does not contain any file	7-24
Display after the attempt to perform an unavailable operation during measurement in progress	7-25
Selection of SETUP FILES to be deleted	7-25
Execution of RESULT FILES deletion	7-25
Execution of the @SET3 file deletion and its influence on the memory space	7-26
Execution of the @SET8 file deletion and the influence of this process on the memory space	7-26
DELETE ALL text highlighted (displayed inversely) in FILE list	7-26
RESULT FILES selected to the execution of DELETE ALL operation	7-26
Display after the attempt to perform an unavailable operation during measurement in progress	7-27
Displays with the confirmation window during the execution of DELETE ALL operation	7-27
Execution of DELETE ALL operation in the case of RESULT FILES selection	7-27
LOGGER FILES selected to the execution of DELETE ALL operation	7-27
Display after the attempt to perform an unavailable operation during measurement in progress	7-28
Displays with the confirmation window during the execution of DELETE ALL operation	7-28
Execution of DELETE ALL operation in the case of LOGGER FILES selected	7-28
SETUP FILES selected to the execution of DELETE ALL operation	7-28
Display after the attempt to perform an unavailable operation during measurement in progress	7-29
Displays with the confirmation window during the execution of DELETE ALL operation	7-29
Execution of DELETE ALL operation in the case of SETUP FILES selection	7-29
Execution of DELETE ALL operation for all type files simultaneously	7-29
DEFRAGMENTATION text highlighted (displayed inversely) in FILE list	7-30
FILES DEFRAGMENT. selected to the execution of DEFRAGMENTATION operation	7-30
Confirmation windows during the execution of FILES DEFRAGMENTATION operation	7-31
Display after the attempt to perform an unavailable operation during measurement in progress	7-31
Message in the case when the execution of DEFRAGMENTATION operation is unnecessary	7-31
Execution of DEFRAGMENTATION operation	7-31
Result of FILES DEFRAGMENTATION operation	7-32
LOGGER DEFRAGMENT. selected to the execution of DEFRAGMENTATION operation	7-32
Confirmation windows during the execution of LOGGER DEFRAGMENTATION operation	7-32
Display after the attempt to perform an unavailable operation during measurement in progress	7-32
Message in the case when the execution of DEFRAGMENTATION operation is unnecessary	7-33
Execution of DEFRAGMENTATION operation	7-33
Result of LOGGER DEFRAGMENTATION operation	7-33
CATALOGUE text highlighted (displayed inversely) in FILE list	7-33
CATALOGUE window when the memory is empty	7-34
Contents of CATALOGUE window	7-34
Exemplary result files associated with the same logger file &LOG2 in CATALOGUE window	7-35
FREE SPACE text highlighted (displayed inversely) in FILE list	7-35
FREE SPACE window after the execution of DELETE ALL operation	7-35
FREE SPACE window with the number depending on the measurements and operations performed	7-36
SAVE SETUP text highlighted (displayed inversely) in FILE list	7-36
SAVE SETUP window in FILE list	7-36
Display during the process of setting the character in the edited name	7-36
Display during the selection of the character's position to be edited	7-37
Display during the selection of the character	7-37
Displays in FILE NAME edition after pressing the <SHIFT> and <▶> push-buttons	7-37
Displays in FILE NAME edition after pressing the <SHIFT> and <◀> push-buttons	7-37
Displays during the attempt of overwriting the existing file, changing the name and saving data	7-38
Displays in the simplified edition of the setup file name and saving operation execution	7-38
Displays in the simplified edition of the file name, saving and the "saturation" of that operation	7-38

Displays after the attempt to perform unavailable saving operation; the return to SAVE SETUP	7-39
Displays during and after the execution of SAVE operation	7-39
Displays after the attempt to overwrite a file if REPLACE is active	7-39
FILE list with LOAD SETUP text highlighted (displayed inversely)	7-40
Display after the attempt to perform an unavailable operation during measurement in progress	7-40
Display during the execution of LOAD SETUP operation	7-40
Exemplary contents of LOAD SETUP window	7-40
Displays after the execution of LOAD SETUP operation	7-41
FILE list with DIRECTORY text selected (a) and DIRECTORY window opened (b)	7-41
FILE list, DIRECTORY window	7-41
FILE list with COPY FILES TO USB text selected (a) and COPY FILES window opened (b)	7-42
RESULT FILES selection to the execution of COPY FILES TO USB operation (a); RESULT, LOGGER and SETUP files selected to the execution of COPY FILES TO USB operation (b)	7-42
Display after the attempt to perform an unavailable operation during measurement in progress	7-42
Display after the execution of COPY FILES TO USB operation (a) and when the file exists already (b)	7-42
FILE list with MOVE FILES TO USB text selected (a) and the MOVE FILES window opened (b)	7-43
RESULT FILES selection to the execution of MOVE FILES TO USB operation (a) RESULT, LOGGER and SETUP files selected to the execution of MOVE FILES TO USB operation (b)	7-43
Display after the attempt to perform an unavailable operation during measurement in progress	7-43
Display after the execution of MOVE FILES TO USB operation (a) and when the file already exists in the USB memory (b)	7-44
Display in the main list; REPORT text highlighted (displayed inversely)	8-1
SETUP list with USB-HOST PORT selected and this window with the activated RS232	8-1
SETUP list with RS232 selected and the exemplary contents of this window	8-1
REPORT windows in SM (SOUND METER) mode	8-2
REPORT windows in the vibration mode	8-2
REPORT windows with TITLE selected in SM (a) and VM (b)	8-3
Displays in the text edition of the report's header	8-3
Displays with all available characters	8-3
Displays with all available characters (cont.)	8-4
REPORT windows with PRINT RESULTS selected in SM (a) and VM (b)	8-4
Display after the attempt to perform an unavailable operation during measurement in progress	8-4
Display in REPORT list; the execution of PRINT RESULTS	8-4
Example of the printed results - A5 format	8-5
Example of the printed results from SOUND METER mode (LEVEL METER) - A4 format	8-6
Example of the printed results from VIBRATION METER mode (1/3 OCTAVE) - A4 format	8-7
Displays with the confirmation request of the paper ejection	8-7
Displays during the results printing when there is no transfer (a) and no data (b)	8-8
REPORT window with PRINT STATISTICS selected	8-8
Display after the attempt to perform an unavailable operation during measurement in progress	8-8
Display in REPORT list; the execution of PRINT STATISTICS	8-8
Displays with the confirmation request of the paper ejection	8-9
Example of the printed statistics from SOUND LEVEL METER mode - format A5	8-11
Example of the printed statistics from SOUND METER mode (DOSE METER) - format A4	8-12
Displays during the statistics printing when there is no transfer (a) and no data (b)	8-12
REPORT windows with PRINT FILE selected in SM (a) and VM (b)	8-12
Display after the attempt to perform an unavailable operation during measurement in progress	8-13
Display in REPORT list; PRINT FILE position when no files were saved	8-13
Displays during the selection of the file to be printed	8-13
Display during the execution of PRINT FILE operation	8-13
Display during the file sending out when there is no data transfer	8-13
Example of the printed file from VIBRATION METER mode (1/3 OCTAVE) - format A5	8-15
Example of the printed file from SOUND METER mode (LEVEL METER) - format A4	8-17
REPORT windows with PRINT LOGGER selected in SM (a) and VM (b)	8-17
PRINT LOGGER window opened - Function not available message	8-17
REPORT windows with PRINT USER FILTERS selected in SM and in VM	8-17
Display after the attempt to perform an unavailable operation during measurement in progress	8-18
PRINT USER FILTERS windows; the user filter selection	8-18
Display in REPORT list; the execution of PRINT USER FILTERS	8-18

Display during the file transfer from the logger when there is no data transfer	8-18
Example of the printed coefficients of the user filter S1 - format A4	8-19
Example of the printed coefficients of the user filter S2 - format A5	8-19
REPORT windows with PRINT CATALOGUE selected in SM (a) and VM (b)	8-19
Display after the attempt to perform an unavailable operation during measurement in progress	8-20
Display in REPORT list; the execution of PRINT CATALOGUE	8-20
Displays with the confirmation request of the paper ejection	8-20
Example of the printed catalogue - format A4	8-20
Example of the printed catalogue - format A5	8-21
Display during the catalogue printing when there is no data transfer	8-21
REPORT windows with OPTION selected in SM (a) and in VM (b)	8-21
OPTIONS windows; the selection of the format	8-21
OPTIONS windows; the selection of the paper ejection	8-22
Displays with the request for the confirmation of the paper ejection	8-22
Display after a printing when there is not possible to eject a paper	8-22
Display in the main list; SETUP text highlighted (displayed inversely)	9-1
SETUP list in the SM	9-2
SETUP list in VM	9-2
SETUP list; LANGUAGE text highlighted (displayed inversely)	9-3
Displays with the English version of the user interface	9-3
Displays with the Italian version of the user interface	9-3
Displays with the Polish version of the user interface	9-3
Displays with the Hungarian version of the user interface	9-3
Displays with the Flemish version of the user interface	9-3
Displays with the French version of the user interface	9-4
Displays with the Spanish version of the user interface	9-4
Displays with the German version of the user interface	9-4
Displays with the Turkish version of the user interface	9-4
Displays during the entering of the access code to the Russian version of the user interface	9-4
Displays with the Russian version of the user interface available only on some markets	9-4
SETUP list; CLEAR SETUP text highlighted (displayed inversely)	9-5
Displays with the request for the confirmation for CLEAR SETUP execution	9-5
Displays during and after the execution of CLEAR SETUP function	9-5
SETUP list; COMPENSATION FILTER text highlighted (displayed inversely)	9-5
Compensation filter window with all available options	9-6
Displays with the question about switching on the compensation filter	9-6
SETUP list with DAY TIME LIMITS text highlighted (displayed inversely)	9-6
Displays with available DAY TIME LIMITS	9-7
SETUP list with EXPOSURE TIME text highlighted (displayed inversely)	9-7
EXPOSURE TIME windows	9-7
SETUP list, EXTERNAL I/O SETUP text highlighted	9-8
EXTERNAL I/O SETUP windows; MODE selection	9-8
EXTERNAL I/O SETUP windows; D/A selection	9-9
EXTERNAL I/O SETUP windows; the source selection for D/A option	9-9
MEASURE TRIGGER windows; TRIGGER selection	9-9
EXTERNAL I/O SETUP windows; FUNCTION selection	9-9
EXTERNAL I/O SETUP windows; POLARISATION selection	9-10
EXTERNAL I/O SETUP windows; ACTIVE LEVEL selection	9-10
EXTERNAL I/O SETUP windows; the SOURCE selection	9-10
EXTERNAL I/O SETUP windows; ALARM LEVEL setting	9-11
SETUP list, HUMAN VIB. FILT. text highlighted (displayed inversely)	9-11
Displays during the entering of the access code to a function	9-11
SETUP list, IEPE CURRENT text highlighted (displayed inversely)	9-12
IEPE CURRENT windows; the IEPE supply selection	9-12
SETUP list, REFERENCE LEVELS text highlighted (displayed inversely)	9-12
REFERENCE LEVELS windows; the reference level setting of acceleration signal	9-13
REFERENCE LEVEL windows; setting the reference level of velocity signal	9-13
REFERENCE LEVELS windows; setting the reference level of displacement signal	9-13
REFERENCE LEVELS windows; the reference level of the acoustic signal	9-13

SETUP list, REMOTE COMMUNICATION text highlighted (displayed inversely)	9-14
REMOTE COMMUNICATION windows; TYPE selection	9-14
REMOTE COMMUNICATION windows; packet size selection	9-14
SETUP list with RMS INTEGRATION text highlighted (displayed inversely)	9-15
Displays and with the available options of RMS INTEGRATION	9-15
SETUP list, the RS232 text highlighted (displayed inversely)	9-15
RS232 windows; the possible settings of BAUD RATE	9-16
RS232 window; the setting of the TIME OUT with 1-second step	9-16
RS232 window; the setting of the TIME OUT with 10-seconds step	9-16
SETUP list, RTC text highlighted (displayed inversely)	9-17
RTC windows with the different parameters to be set	9-17
SETUP list, RT60 AVERAGING text highlighted (displayed inversely)	9-18
RT60 AVERAGING window; AVERAGING activation	9-18
RT60 AVERAGING window; AVERAGING CLEAR selection	9-18
RT60 AVERAGING window; the change of AVERAGING NO. after measurement (position is not accessible)	9-18
RT60 selected in SETUP list and RT60 OPTIONS window opened	9-19
RT60 OPTIONS window; SMOOTHING selection with the step equal to 1	9-19
RT60 OPTIONS window; the SMOOTHING selection with the step equal to 5	9-19
RT60 OPTIONS window; NOISE MAR. selection with 0.1dB step	9-20
RT60 OPTIONS window; NOISE MAR. selection with 1dB step	9-20
RT60 RESULTS selected in SETUP list and RT60 RESULTS window opened	9-20
RT60 RESULTS window, unmarking option in 1/3 octave band	9-21
SETUP list, SHIFT MODE text highlighted (displayed inversely)	9-21
SHIFT MODE windows; the available SHIFT settings	9-21
SHIFT MODE windows; the available ST/SP settings	9-22
SETUP list, STATISTICAL LEVELS sub-list selected	9-22
Displays in the STATISTICAL LEVELS sub-list	9-23
SETUP list, TIMER text highlighted (displayed inversely)	9-23
TIMER windows; the mode selection	9-23
TIMER windows; setting day of the instrument's switch on	9-24
TIMER windows; setting hour and minute of the instrument's switch on	9-24
TIMER windows; setting REPETITION parameter	9-25
Exemplary settings made for the desired execution of TIMER function	9-25
Counting down during the warming up of the instrument after switching it on	9-25
Displays during the executing of TIMER function	9-26
SETUP list, USB-HOST PORT text highlighted (displayed inversely)	9-26
Displays in USB-HOST PORT	9-26
Displays during the entering of the access code to SRT RECORDING, WAVE RECORDING or EVENT RECORDING	9-27
Displays with the different USB disk warnings	9-27
Contents of DIRECTORY window	9-28
Displays during IrDA interface connection	9-29
SETUP list, USER FILTERS text highlighted (displayed inversely)	9-29
USER FILTERS windows, SPECTRUM BASED FILTERS selected	9-29
SPECTRUM BASED FILTERS window, VIEW text highlighted	9-30
VIEW windows, the filter selection	9-30
S1 filter windows	9-30
SPECTRUM BASED FILTERS window, the EDIT text highlighted	9-30
EDIT windows, the filter selection	9-31
S1 filter windows; the coefficient selection	9-31
SPECTRUM BASED FILTER window; CLEAR position selected	9-31
CLEAR windows, the selection of the filters to be cleared	9-32
Displays during and after the execution of CLEAR operation	9-32
SETUP list, VIBRATION UNITS text highlighted (displayed inversely)	9-32
VIBRATION UNITS windows with the available positions	9-32
SETUP list, WARNINGS text highlighted (displayed inversely)	9-33
WARNINGS windows; RESULTS NOT SAVED selected	9-33
Displays with LAST RESULTS NOT SAVE warning	9-33

WARNINGS windows; USB DISK FREE SP. selected	9-34
WARNINGS windows; MIN FREE SPACE selection	9-34
Display with USB DISK FREE SPACE warning	9-34
Effect of mechanical vibration perpendicular to the plane of microphone diaphragm	C-6
Effect of mechanical vibration parallel to the plane of microphone diaphragm	C-6
SA 22 Free Field Characteristics	C-7
Diffuse field filter implemented in SVAN 957 instrument	C-8
Effect of extension cable for the measurements with Z filter for $U_{in}=1V_{RMS}$	C-9
Typical free field frequency response of SVAN 957 instrument	C-9
Typical case effect of SVAN 957 instrument and compensation filters characteristics	C-11
SVAN 957 directional response with ACO 7052H and SV 12L for given frequencies	C-18
Total directional characteristics of SVAN 957 with ACO 7052H microphone and SV 12L preamplifier	C-19
TNC connector (external view)	C-31
Power supply connector 5.5 / 2.1 mm (external view)	C-32
RCA Jack - "Cinch" (external view)	C-32
USB socket (external view)	C-34
USB socket (external view)	C-34
Results shown in the first presentation mode of statistical levels	D-6
Results shown in the second presentation mode; the selection of the statistical level	D-6
Results shown in both presentation modes of statistical levels; the change of the mode	D-6
MENU, FUNCTION and MODE windows; sound mode selection	D-9
INPUT and PROFILE (x) windows; weighting filter selection	D-9
Full band frequency characteristics of Z filter implemented in the instrument	D-9
Low band frequency characteristics of Z filter implemented in the instrument	D-10
Frequency characteristics of A filter implemented in the instrument	D-10
Frequency characteristics of C filter implemented in the instrument	D-11
SETUP and COMPENSATION FILTER windows; the activation of FREE FIELD filter	D-11
Frequency characteristics of FREE FIELD filter implemented in the instrument	D-11
SETUP and COMPENSATION FILTER windows; the activation of DIFFUSE FIELD filter	D-12
Frequency characteristics of DIFFUSE FIELD filter implemented in the instrument	D-12
SETUP and COMPENSATION FILTER windows; activation of OUTDOOR ENVIRONMENTAL filter	D-12
Frequency characteristics of ENVIRONMENTAL filter implemented in the instrument	D-13
SETUP and COMPENSATION FILTER windows; the activation of OUTDOOR AIRPORT filter	D-13
Frequency characteristics of AIRPORT filter implemented in the instrument	D-13
MENU, FUNCTION and MODE windows; vibration mode selection	D-14
INPUT and PROFILE (x) windows; weighting filter selection in acceleration measurements	D-14
Characteristics of HP1 digital filter implemented for the acceleration measurements in VM	D-14
Characteristics of HP3 digital filter implemented for the acceleration measurements in VM	D-15
Characteristics of HP10 digital filter implemented for the acceleration measurements in VM	D-15
PROFILE(1) windows; the selection of the weighting filter in velocity measurements	D-16
Characteristics of Vel1 digital filter implemented for the velocity measurements in VM	D-16
Characteristics of Vel3 digital filter implemented for the velocity measurements in VM	D-16
Characteristics of Vel10 digital filter implemented for the velocity measurements in VM	D-17
Characteristics of VelMF digital filter implemented for the velocity measurements in VM	D-17
PROFILE(1) windows; the selection of the weighting filter in displacement measurements	D-18
Characteristics of Dil1 digital filter implemented for the displacement measurements in VM	D-18
Characteristics of Dil3 digital filter implemented for the displacement measurements in VM	D-18
Characteristics of Dil10 digital filter implemented for the displacement measurements in VM	D-19
SETUP and ENTER CODE windows; the activation of human vibration option	D-19
SETUP windows after the successful activation of human vibration option	D-19
PROFILE(1) windows; the selection of old weighting filters in human vibration option	D-20
Characteristics of W-Bxy digital filter implemented in the instrument in VM	D-20
Characteristics of W-Bz digital filter implemented in the instrument in VM	D-20
Characteristics of H-A digital filter implemented in the instrument in VM	D-21
Characteristics of W-Bc digital filter implemented in the instrument in VM	D-21
PROFILE(1) windows; the selection of new weighting filters in human vibration option	D-22
Characteristics of Wk digital filter implemented in the instrument in HVM	D-22
Characteristics of Wd digital filter implemented in the instrument in HVM	D-23
Characteristics of Wc digital filter implemented in the instrument in HVM	D-23

Characteristics of Wj digital filter implemented in the instrument in HVM	D-24
Characteristics of Wm digital filter implemented in the instrument in HVM	D-24
Characteristics of Wh digital filter implemented in the instrument in HVM	D-25
Characteristics of Wg digital filter implemented in the instrument in HVM	D-25
Characteristics of Wb digital filter implemented in the instrument in HVM	D-26
PROFILE(1) window; the selection of KB filter	D-26
Characteristics of KB digital filter implemented in the instrument in VM	D-26
Characteristics of HP digital filter implemented in the instrument in FFT, 1/1 and 1/3 OCTAVE analysis	D-27
Characteristics of the exemplary digital 1/1 OCTAVE filter implemented in the instrument	D-27
Characteristics of the exemplary lower digital 1/3 OCTAVE filter implemented in the instrument	D-28
Characteristics of the exemplary middle digital 1/3 OCTAVE filter implemented in the instrument	D-28
Characteristics of the exemplary upper digital 1/3 OCTAVE filter implemented in the instrument	D-28