



**SVANTEK**

**INSTRUMENTATION FOR SOUND & VIBRATION  
MEASUREMENTS AND ANALYSIS**

ISO 9001



# SVAN 959

## SOUND & VIBRATION ANALYSER

### USER'S MANUAL



*SVANTEK Sp. z o.o.  
WARSAW, May 2007*



**Notice:** This user's manual presents the software revision named 6.04 / 6.04.5 (cf. the description of the **UNIT LABEL** position of the **DISPLAY** list). The succeeding software revisions (marked with the bigger numbers) can slightly change the view of some displays presented in the text of the manual.

## CONTENTS

1	INTRODUCTION	1-1
1.1	SVAN 959 as Sound Level Meter & Analyser	1-1
1.2	SVAN 959 as Vibration Meter & Analyser	1-2
1.3	General features of SVAN 959	1-2
1.4	Accessories included	1-2
1.5	Accessories available	1-2
1.6	Software options available	1-3
1.7	Current list of SVAN 959 options and accessories	1-4
2	MANUAL CONTROL OF THE INSTRUMENT	2-1
2.1	Control push-buttons on the front panel	2-1
2.2	Input and output sockets of the instrument	2-6
3	SETTING THE INSTRUMENT	3-1
3.1	Basis of the instrument's control	3-1
3.2	Powering of the instrument	3-23
3.3	Initial setup of the instrument	3-25
3.4	Selection of the working mode - MODE	3-29
3.5	Activation of optional functions	3-29
3.6	Memory organisation	3-31
4	FUNCTIONS OF THE INSTRUMENT - FUNCTION	4-1
4.1	Selecting the mode of the instrument - MODE	4-1
4.2	Measurement functions of the instrument - MEASUREMENT FUNCTION	4-1
4.3	Instrument's calibration - CALIBRATION	4-2
4.3.1	Calibration BY SENSITIVITY in the case of acoustic signal	4-3
4.3.2	Calibration BY SENSITIVITY in the case of vibration signal	4-4
4.3.3	Calibration BY MEASUREMENT in the case of acoustic signal	4-6
4.3.4	Calibration BY MEASUREMENT in the case of vibration signal	4-7
4.3.5	History of the calibration - LAST CALIBRATION	4-9
4.3.6	Automatic reading of a vibration transducer parameters - TEDS	4-9
5	MEASUREMENT PARAMETERS SETTING - INPUT	5-1
5.1	Selection of measurement parameters - MEASUREMENT SETUP	5-2
5.1.1	Setting time delay before the start of measurements - START DELAY	5-2
5.1.2	Setting the integration period - INTEGR. PERIOD	5-3
5.1.3	Setting the number of repetition of measurement cycles - REP. CYCLE	5-4
5.1.4	Logger functionality switching On / Off - LOGGER	5-5
5.1.5	Setting time period between two writings to the logger's file - LOGGER STEP	5-5
5.1.6	Logger file name edition - LOGGER NAME	5-6
5.2	Measurement range setting - MEASUREMENT RANGE	5-7
5.3	Setting parameters in a profile - PROFILE x	5-8

5.3.1	Weighting filter selection in a profile - FILTER	5-9
5.3.2	RMS detector selection - DETECTOR	5-10
5.3.3	PEAK result selection for saving in a logger's file - LOGGER PEAK	5-11
5.3.4	MAX result selection for saving in a logger's file - LOGGER MAX	5-11
5.3.5	P-P result selection for saving in a logger's file - LOGGER P-P	5-12
5.3.6	MIN result selection for saving in a logger's file - LOGGER MIN	5-12
5.3.7	RMS result selection for saving in a logger's file - LOGGER RMS	5-13
5.4	Triggering mode and parameters selection - TRIGGER SETUP	5-13
5.4.1	Trigger parameters setting - MEASURE TRIGGER	5-13
5.4.1.1	Switching the triggering on and off - TRIGGER	5-14
5.4.1.2	Selection of the triggering signal - SOURCE	5-15
5.4.1.3	Setting the level of the triggering signal - LEVEL	5-15
5.4.1.4	Setting the speed of the triggering signal changes - GRADIENT	5-16
5.4.2	Trigger parameters in logger setting - LOGGER TRIGGER	5-17
5.4.2.1	Switching the logger triggering on and off - TRIGGER	5-17
5.4.2.2	Selection of the triggering signal in logger - SOURCE	5-18
5.4.2.3	Setting the level of the triggering signal in the logger - LEVEL	5-18
5.4.2.4	Selection of the number of the results to be saved in the logger before the fulfilment of the triggering condition - PRE	5-20
5.4.2.5	Selection of the number of the results to be saved in the logger after the fulfilment of the triggering condition - POST	5-20
5.4.3	Trigger parameters for recorder setting - RECORDER TRIGGER	5-21
5.4.3.1	Selecting trigger mode - TRIGGER	5-22
5.4.3.2	Selecting the triggering signal - SOURCE	5-22
5.4.3.3	Selecting level for recording trigger- LEVEL	5-22
5.4.3.4	Setting the speed of the triggering signal changes - GRADIENT	5-23
5.5	Selection of dose meter parameters - DOSEMETER SETUP	5-24
5.5.1	Setting criterion sound level - CRITERION LEVEL	5-24
5.5.2	Setting criterion sound level - THRESHOLD LEVEL	5-24
5.5.3	Setting criterion sound level - EXCHANGE RATE	5-25
5.6	Selection of FFT analysis parameters - FFT	5-25
5.6.1	The averaging of spectra in the FFT analysis - AVERAGING	5-25
5.6.2	Selecting the weighting filter during the FFT analysis - FILTER	5-25
5.6.3	Selecting the analysis band of the signal - BAND	5-26
5.6.4	Selecting the time window for the FFT analysis - WINDOW	5-26
5.6.5	Selecting the number of the lines of FFT analysis - LINES	5-27
5.6.6	Enabling the FFT spectra time history logging - LOGGER	5-27
5.7	Selection of 1/1 octave and 1/3 octave spectrum parameters - SPECTRUM	5-27
5.7.1	Weighting filter selection in 1/1 OCTAVE or 1/3 OCTAVE analysis - FILTER	5-28
5.7.2	Selecting the band during the 1/1 OCTAVE or 1/3 OCTAVE analysis - BAND	5-28
5.7.3	Activation of logger for 1/1 OCTAVE or 1/3 OCTAVE analysis results - LOGGER	5-29
5.8	Selection of enveloping parameters - ENVELOPING	5-29
5.8.1	Selecting the weighting filter during the enveloping calculation - FILTER	5-29
5.8.2	Selecting the band during the enveloping analysis - BAND	5-30
5.8.3	Selecting the number of the lines in enveloping spectrum - LINES	5-31
5.9	Selection of RPM measurements parameters - RPM	5-31

---

5.9.1	Switching on the RPM measurement - RPM	5-31
5.9.2	Selecting the number of pulses / rotations - PULSE / ROTATION	5-31
5.9.3	Selecting the unit of RPM measurement - UNIT	5-32
6	DATA AVAILABLE ON THE DISPLAY - DISPLAY	6-1
6.1	Selection of the modes of measurement results presentation - DISPLAY MODES	6-1
6.1.1	Switching on/off spectrum view - SPECTRUM	6-8
6.1.2	Switching on/off three profiles view - 3 PROFILES	6-9
6.1.3	Setting on/off statistics view in SM - STATISTICS	6-11
6.1.4	Setting on/off logger view - LOGGER	6-13
6.1.5	Setting on/off the view of the file description - FILE INFO	6-13
6.2	Setting the parameters of the graphical modes - DISPLAY SETUP	6-14
6.2.1	Setting the scale of the presentation and the display's grid - DISPLAY SCALE	6-14
6.2.1.1	Setting the scale of the measurement results presentation - SCALE	6-14
6.2.1.2	Scaling the vertical axis of the graphical mode presentation - DYNAMIC	6-15
6.2.1.3	Scaling the horizontal axis of the graphical presentation - X-ZOOM	6-15
6.2.1.4	Switching on/off the grid in the graphical mode presentation - GRID	6-16
6.2.2	Selection of the Spectrum Type in VM - SPECTRUM TYPE	6-16
6.2.3	Setting the parameters of the logger files presentation - SPECTRUM VIEW	6-17
6.2.3.1	Selection of the graphical presentation type - VIEW	6-17
6.2.3.2	Selection of the spectrum type for the presentation - TYPE	6-18
6.2.3.3	Selection of the MAX spectrum for the presentation - MAX	6-18
6.2.3.4	Selection of the MIN spectrum for the presentation - MIN	6-18
6.2.4	Selection of the Weighting Filters - TOTAL VALUES	6-18
6.2.4.1	Selecting the type of the spectrum in VM to be presented - TYPE	6-19
6.2.4.2	Setting the calibration factor for the presented spectrum in VM - CAL. F.	6-20
6.2.5	Setting the parameters of the logger files presentation - LOGGER VIEW	6-20
6.2.5.1	Selecting the shape of the graphical presentation - VIEW	6-20
6.2.5.2	Setting the time to be presented - TIME	6-21
6.3	Selection of the logger's file to the display presentation - LOGGER VIEW	6-21
6.4	Setting the parameters of the display - SCREEN SETUP	6-24
6.4.1	Setting the contrast of the display - CONTRAST	6-24
6.4.2	Automatic switch off of the backlight - BACKLIGHT TIMEOUT	6-24
6.5	Checking the state of the internal battery - BATTERY	6-25
6.6	Checking specification of the instrument - UNIT LABEL	6-25
7	SAVING THE MEASUREMENT RESULTS - FILE	7-1
7.1	Saving files in the instrument's memory - SAVE and SAVE NEXT	7-3
7.2	Controlling the data storing in the instrument's memory - SAVE OPTIONS	7-10
7.2.1	Saving data starting from the same address - RAM FILE	7-10
7.2.2	Replacement of the existing files by the new ones - REPLACE	7-11
7.2.3	Controlling the measurement statistics savings - SAVE STATISTICS	7-11
7.2.4	Controlling the measurement results savings - AUTO SAVE	7-12
7.2.5	Direct access to the SAVE / SAVE NEXT function - DIRECT SAVE	7-15
7.2.6	Saving maximum values in the spectrum - SAVE MAX SPECT.	7-16
7.2.7	Saving the lowest values in the spectrum - SAVE MIN SPECT.	7-16

7.3	Loading the files with the measurement results - LOAD	7-17
7.4	Removing a file with the measurement results from memory - DELETE	7-20
7.4.1	Deleting files with the main results - RESULT FILES	7-20
7.4.2	Deleting logger files - LOGGER FILES	7-22
7.4.3	Deleting files with setup settings - SETUP FILES	7-24
7.5	Removing all files with measurement results from memory - DELETE ALL	7-26
7.5.1	Deleting all result files - RESULT FILES	7-26
7.5.2	Deleting all logger files - LOGGER FILES	7-27
7.5.3	Deleting all setup files - SETUP FILES	7-28
7.6	Merging file space - DEFRAGMENTATION	7-30
7.6.1	Merging result and setup files memory - FILES DEFRAGMENTATION	7-30
7.6.2	Merging logger files memory - LOGGER DEFRAGMENT.	7-32
7.7	Checking the contents of the memory - CATALOGUE	7-33
7.8	Checking the free space in the memory - FREE SPACE	7-35
7.9	Saving setup files in the instrument's memory - SAVE SETUP	7-36
7.10	Loading the files with the setup settings - LOAD SETUP	7-39
7.11	Connecting the external USB memory stick- DIRECTORY	7-41
7.12	Copying files to the external USB memory stick- COPY FILES TO USB	7-42
7.13	Moving files to the USB memory stick- MOVE FILES TO USB	7-43
8	REPORTS PRINTING - REPORT	8-1
8.1	Edition of the user's text to be added to the reports - TITLE	8-3
8.2	Printing of the measurement results - PRINT RESULTS	8-4
8.3	Printing of the statistics of sound measurement results - PRINT STATISTICS	8-8
8.4	Printing of the measurement results from the selected file - PRINT FILE	8-13
8.5	Printing of the logger results - PRINT LOGGER	8-16
8.6	Printing of the coefficients of the user filters - PRINT USER FILTERS	8-17
8.7	Printing of the file's catalogue - PRINT CATALOGUE	8-19
8.8	Selection of the printing options - OPTIONS	8-21
8.8.1	Selection of the format of the print out - FORMAT	8-21
8.8.2	Controlling the paper ejection after print out - EJECT P.	8-22
9	SETUP MENU - SETUP	9-1
9.1	Setting the language of the user interface - LANGUAGE	9-3
9.2	Return to the factory settings - CLEAR SETUP	9-5
9.3	Day time limits selection - DAY TIME LIMITS	9-5
9.4	Exposure time setting - EXPOSURE TIME	9-6
9.5	Setting parameters of the Ext. I/O port - EXTERNAL I/O SETUP	9-7
9.5.1	Mode selection of the Ext. I/O port - MODE	9-7
9.5.2	Digital output function selection of the I/O socket - FUNCTION	9-8
9.5.3	Polarisation selection of the digital output signal - POLARISATION	9-8
9.5.4	Active level selection of the digital output signal - ACTIVE LEVEL	9-9
9.5.5	Source signal selection for the alarm pulse generation - SOURCE	9-9

---

9.5.6 Alarm level selection on the digital output of I/O - ALARM LEVEL	9-9
9.6 Activation of human vibration filters - HUMAN VIB. FILT.	9-10
9.7 Selection of the current IEPE supply - IEPE CURRENT	9-10
9.8 Selection of the microphone parameters - MICROPHONE	9-11
9.8.1 Switching on or off the compensation filter - COMPENSATION	9-11
9.8.2 Switching on or off the outdoor filter - OUTDOOR FILTER	9-12
9.8.3 Selection the type of the outdoor filter - FILTER TYPE	9-12
9.8.4 Setting the conditions for the diffuse field measurements - FIELD CORRECTION	9-12
9.9 Reference signal in vibration measurements - REFERENCE LEVELS	9-13
9.10 Setting the reference level of the acceleration signal - ACC	9-13
9.10.1 Setting the reference level of the velocity signal - VEL	9-14
9.10.2 Setting the reference level of the displacement signal - DIL	9-14
9.11 Parameters of remote communication - REMOTE COMMUNICATION	9-14
9.12 Selecting the type of remote communication - TYPE	9-15
9.12.1 Setting the packet size of the remote communication - PACKET	9-15
9.13 Detector's type selection in the LEQ calculations - RMS INTEGRATION	9-15
9.14 Activation of RPM measurement function - RPM MEASUREMENT	9-16
9.15 Setting the parameters of the serial interface - RS232	9-17
9.15.1 Setting the transmission speed of the serial interface - BAUD RATE	9-17
9.15.2 Setting time limit for the performance of serial interface operation - TIME OUT	9-17
9.16 Programming the instrument's internal Real Time Clock - RTC	9-18
9.17 RT 60 averaging function - RT60 AVERAGING	9-18
9.17.1 RT 60 averaging - AVERAGING	9-19
9.17.2 Resetting the averaging process - AVERAGING CLEAR	9-19
9.17.3 RT 60 averaging number - AVERAGING NO.	9-19
9.18 Setting the auxiliary parameters of RT 60 mode - RT60 OPTIONS	9-20
9.18.1 Setting the sound pressure level decay curve averaging - SMOOTHING	9-20
9.18.2 Setting the margin value of background noise level - NOISE MAR.	9-20
9.19 Selection of RT60 results parameters - RT60 RESULTS	9-21
9.20 Selection of few push-buttons mode - SHIFT MODE	9-21
9.20.1 <SHIFT> / <ALT> push-button working mode selection - SHIFT	9-22
9.20.2 <START / STOP> push-button working mode selection - ST/SP	9-22
9.21 Activation of the signal generation option - SIGNAL GENERATOR	9-23
9.22 Setting ten statistical levels - STATISTICAL LEVELS	9-23
9.23 Programming the instrument's internal timer - TIMER	9-24
9.23.1 Selecting the mode of the timer function - MODE	9-24
9.23.2 Setting day of the instrument's switch on - START DAY	9-25
9.23.3 Setting hour of the instrument's switch on - START HOUR	9-25
9.23.4 Selecting the start hours for four irregular automatic measurements - TIMEx	9-25
9.23.5 Selecting the period between two consecutive measurements - REPETITION	9-26
9.23.6 Description of the exemplary timer function execution	9-26
9.24 Selection of tonality parameters - TONALITY	9-27

9.24.1	Selecting/setting maximal tone bandwidth - MAX BAND	9-27
9.24.2	Setting the criterion of tone seeking - TONE SEEK	9-28
9.24.3	Setting the regression of tonality measurements - REGRESSION	9-28
9.24.4	Selecting the tone band of tonality measurements - TONE BAND	9-29
9.24.5	Selection of the standard for tonality measurement - STANDARD	9-29
9.25	Selection the USB–HOST port functionality - USB–HOST PORT	9-30
9.26	Setting the coefficients of the user filters - USER FILTERS	9-33
9.26.1	Introduction the parameters of real time filters - REAL TIME FILTERS	9-33
9.26.1.1	Selecting real time filter - Rx	9-33
9.26.2	Setting filter coefficients for octave analysis - SPECTRUM BASED FILTERS	9-35
9.26.2.1	Looking at the coefficients of the user filters set - VIEW	9-35
9.26.2.2	Setting the coefficients of the user filters set - EDIT	9-36
9.26.2.3	Clearing the coefficients of the user filters - CLEAR	9-37
9.27	Selection of the vibration units - VIBRATION UNITS	9-38
9.28	Warnings selection - WARNINGS	9-38
9.28.1	Saving the measurement results in a file - RESULTS NOT SAVED	9-38
9.28.2	Checking free space on the USB disk - USB DISK FREE SP.	9-39
9.28.3	Minimum USB disk memory free space setting - MIN FREE SPACE	9-39

## LIST OF FIGURES

SVAN 959 instrument with the preamplifier, the microphone and the USB Memory Stick .....	1-3
Control push-buttons of the SVAN 959 instrument.....	2-1
Display with the “MARKERS” (after pressing <ALT> and <SHIFT> together).....	2-4
Displays with the activated markers .....	2-5
Time history plot with the indication of the active markers .....	2-5
Top cover of the SVAN 959 instrument in 1:1 scale .....	2-6
Bottom cover of the SVAN 959 instrument in 1:1 scale .....	2-6
Front panel of the SVAN 959 instrument in 1:1 scale .....	2-7
Rear panel of the SVAN 959 instrument in 1:1 scale .....	2-8
Displays with the highlighted elements of the main list .....	3-1
Display with the recently accessed menu items (after double pressing of the <MENU> push-button).....	3-1
Displays with the main list (a) and the elements of the INPUT list (b) .....	3-2
MEASUREMENT SETUP window opened ( <i>path: MENU / INPUT / MEASUREMENT SETUP</i> ) .....	3-2
MEASUREMENT SETUP window; the INTEGR. PERIOD position accessible .....	3-2
Displays with the accessed INTEGR. PERIOD position after pressing the <◀> or <▶> push-buttons, respectively.....	3-2
Displays after three consecutive pressing of the <ESC> push-button from the MEASUR. SETUP sub-list .....	3-2
Displays during and after the accessing the FREE SPACE window ( <i>path: MENU / FILE / FREE SPACE</i> ).....	3-3
Displays during the edition of the text, which has to be printed as a header in the measurement reports ( <i>path: MENU / REPORT / TITLE</i> ).....	3-3
Control diagram of the FUNCTION list.....	3-4
Control diagram of the INPUT list in the 1/1 OCTAVE and 1/3 OCTAVE mode.....	3-7
Control diagram of the INPUT list in the DOSE METER mode.....	3-7
Control diagram of the INPUT list in the FFT mode.....	3-7
Control diagram of the INPUT list in the ENVELOPING mode .....	3-7
Control diagram of the INPUT list in the LEVEL METER mode.....	3-8
Control diagram of the DISPLAY list in 1/1 OCTAVE and 1/3 OCTAVE analysis of sound.....	3-10
Control diagram of the DISPLAY list in 1/1 OCTAVE and 1/3 OCTAVE analysis of vibration.....	3-11
Control diagram of the DISPLAY list .....	3-12
Control diagram of the FILE list.....	3-15
Control diagram of the REPORT list.....	3-16
Control diagram of the SETUP list in the TONALITY mode .....	3-19
Control diagram of the SETUP list in the RT60 mode .....	3-20
Control diagram of the SETUP list.....	3-23
BATTERY windows for different sources powering the instrument: external power and SA 17A (a), batteries (b) and USB power (c) .....	3-23
BATTERY window when the instrument is powered from external source .....	3-24
Displays with the “Battery” icon (a) and in the BATTERY window ( <i>path: MENU / DISPLAY / BATTERY</i> ) (b) .....	3-24
Display with LOW BATTERY message .....	3-24
Displays with the “Computer” icon (a) and in the BATTERY window (b) .....	3-24
SCREEN SETUP windows; BACKLIGHT TIMEOUT activation.....	3-25
Displays after switching on the instrument in sound (b) or vibration mode (c).....	3-25
Displays in one profile (a) and 3 PROFILES display mode (b) with the SLM measurement results .....	3-25
Displays in one profile (a) and 3 PROFILES display mode (b) with the VLM measurement results .....	3-25
Displays in 3 PROFILES display mode with the measurements results, which are from LEVEL METER mode (continuous lines) (b) and with the results, which are not from the LEVEL METER (dotted lines) .....	3-26
Display with all available icons .....	3-27
Display with “Paper sheet” icon .....	3-27
Display with “Battery” icon.....	3-27
Display with “Computer” icon .....	3-27
Display with “Antenna” (“Tree”) icon .....	3-27
Display with “Loudspeaker” icon.....	3-28
Display with “Headphone” icon .....	3-28
Display with “Envelope” icon .....	3-28

Display with “Bell” icon .....	3-28
Display with “Timer” icon .....	3-28
Display with “Arrows” icon .....	3-29
Displays with the FUNCTION list opened, MODE selected (a) and MEASUR. FUNCTION sub-list opened with all available modes b), (c), (d), (e) .....	3-29
Displays with the FUNCTION list opened, MEASUREMENT FUNCTION selected (a) and MEASUR. FUNCTION sub-list opened with all available options (b), (c), (d), (e), (f), (g), (h), (i) and (j) .....	3-30
Displays during the entering of the access code to a function .....	3-30
Display after the unsuccessful verification of the access code .....	3-30
Scheme of the instrument’s memory organisation without the USB–HOST .....	3-31
Scheme of the instrument’s memory organisation with the USB–HOST and memory stick connected .....	3-32
Displays with the main list, the FUNCTION text selected (a) and the FUNCTION list opened; the MODE selected (b) the MEASUREMENT FUNCTION selected (c) and the CALIBRATION selected (d) .....	4-1
FUNCTION list opened, MODE selected (a) and MEASUR. FUNCTION sub-list opened with all available modes b), (c), (d), (e) .....	4-1
MEASUREMENT FUNCTION window opened in SM (a), in VM (b) and the activation of the optional function (c) .....	4-2
Displays with the main list, the FUNCTION text selected (a), the FUNCTION list opened, the CALIBRATION text selected (b) .....	4-3
Displays with the selected calibration mode and after entering this mode .....	4-3
Displays with the SENSITIVITY positions ( <i>path: MENU / FUNCTION / CALIBRATION / BY SENSITIVITY</i> ) not accessible .....	4-3
Displays during setting the sensitivity higher than 50.0 mV / Pa (a) and after pressing the <ENTER> push-button with the calibration factor calculated (b) .....	4-4
Displays during setting the sensitivity lower than 50.0 mV / Pa (a) and after pressing the <ENTER> push-button with the calibration factor calculated (b) .....	4-4
Displays with the lowest possible sensitivity and the highest calibration factor (a) and the highest sensitivity and the lowest calibration factor (b) .....	4-4
Displays with the selected calibration mode and after entering this mode .....	4-4
Displays with the SENSITIVITY positions ( <i>path: MENU / FUNCTION / CALIBRATION / BY SENSITIVITY</i> ) not accessible .....	4-5
Displays during setting the sensitivity higher than 10.0 mV / ms <sup>-2</sup> (a) and after pressing the <ENTER> push-button with the calibration factor calculated (b) .....	4-5
Displays during setting the sensitivity lower than 10.0 mV / ms <sup>-2</sup> (a) and after pressing the <ENTER> push-button with the calibration factor calculated (b) .....	4-5
Displays with the lowest possible sensitivity and the highest calibration factor (a) and the highest sensitivity and the lowest calibration factor (b) .....	4-5
Displays during the calibration measurement .....	4-6
Displays after the measurements (a) and after the acceptance of the value of the calibration factor (b) .....	4-7
Displays with the selected calibration mode and after entering this mode .....	4-7
Displays while the instrument is waiting for the calibration measurement to commence .....	4-7
Displays during the calibration measurements .....	4-8
Displays after the calibration measurements .....	4-8
Displays after pressing the <ENTER> push-button (after calculation of the calibration factor value) .....	4-8
Displays in the CALIBRATION window, the LAST CALIBRATION text selected (a) the LAST CALIBRATION window opened with ten calibration records (b) .....	4-9
Displays with the LAST CALIBRATION records .....	4-9
Display with the empty LAST CALIBRATION window .....	4-9
CALIBRATION window, TEDS text highlighted .....	4-10
TEDS window opened, NO DATA AVAILABLE message .....	4-10
Main list with the INPUT text selected .....	5-1
INPUT list in the LEVEL METER (a), in 1/1 OCTAVE and 1/3 OCTAVE analyser (b), in DOSE METER (c), in FFT analyser (d) in ENVELOPING (e) and after activation of RPM option in vibration modes (f) .....	5-1
Displays with not active sub-lists of INPUT list during measurement .....	5-1
Displays with the MEASUREMENT SETUP window .....	5-2
MEASUREMENT SETUP windows; the setting of the START DELAY with 1-second step .....	5-2
MEASUREMENT SETUP windows; the setting of the START DELAY with 10-second step .....	5-2
MEASUREMENT SETUP windows; the setting of the INTEGR. PERIOD with 1-second step .....	5-3

MEASUREMENT SETUP windows; the setting of the INTEGR. PERIOD with 10-second step .....	5-3
MEASUREMENT SETUP windows; the setting of the INTEGR. PERIOD with 1 and 10 minutes step .....	5-3
MEASUREMENT SETUP windows; the setting of the INTEGR. PERIOD with 10 hours step .....	5-3
Displays during setting the predefined INTEGR. PERIOD sequence .....	5-4
Display, when the INT.PERIOD is too short for AUTO SAVE option .....	5-4
REP. CYCLE setting with the step equal to one .....	5-4
REP. CYCLE setting with the step equal to 20 .....	5-5
Displays with the LOGGER deactivated and activated .....	5-5
Displays during setting the LOGGER STEP; available values in a sequence 1, 2, 5 .....	5-5
LOGGER STEP setting; available values in milliseconds .....	5-5
LOGGER STEP setting; available values from 500 milliseconds to 1 hour .....	5-6
LOGGER NAME edition in MEASUREMENT SETUP .....	5-6
Displays during the attempt of overwriting the existing file .....	5-6
Relations between INTEGR. PERIOD and LOGGER STEP .....	5-7
INPUT list with the MEASUREMENT RANGE selected .....	5-7
MEASUREMENT RANGE windows in sound modes; the RANGE selection .....	5-8
MEASUREMENT RANGE windows in vibration modes; the RANGE selection .....	5-8
Displays with change of the default range values in sound modes caused by the calibration factor .....	5-8
Displays with change of the default range values in vibration modes caused by the calibration factor .....	5-8
INPUT list with the PROFILE 1, PROFILE 2 and PROFILE 3 selected .....	5-8
PROFILE(x) windows; the selection of the weighting filter in SM .....	5-9
PROFILE(1) windows; the selection of the weighting filter in acceleration measurements .....	5-9
PROFILE(1) windows; the selection of the weighting filter in velocity measurements .....	5-9
PROFILE(1) windows; the selection of the weighting filter in displacement measurements .....	5-10
PROFILE(1) windows; the selection of the R1, R2, R3 weighting filter in VM .....	5-10
PROFILE(1) windows; the selection of the R1, R2, R3 weighting filter in SM .....	5-10
PROFILE(x) windows (SM); the selection of the RMS detector .....	5-10
PROFILE(1) windows (vibration mode); the selection of the RMS detector .....	5-11
PROFILE(x) windows (sound mode); the PEAK result to be not saved or saved in a logger's file .....	5-11
PROFILE(x) windows (vibration); the PEAK result to be not saved or saved in a logger's file .....	5-11
PROFILE(x) windows (SM); the MAX result to be not saved or saved in a logger's file .....	5-12
PROFILE(x) windows (VM); the MAX result to be not saved or saved in a logger's file .....	5-12
PROFILE(x) windows; the P-P result to be not saved or saved in a logger's file .....	5-12
PROFILE(x) windows; the MIN result to be not saved or saved in a logger's file .....	5-12
PROFILE(x) windows (SM); the RMS result to be not saved or saved in a logger's file .....	5-13
PROFILE(x) windows (VM); the RMS result to be not saved or saved in a logger's file .....	5-13
TRIGGER SETUP selected in the INPUT list and the TRIGGER SETUP window .....	5-13
MEASURE TRIGGER windows .....	5-13
MEASURE TRIGGER window; TRIGGER switched off .....	5-14
Displays during the measurements while the triggering condition is not fulfilled .....	5-14
MEASURE TRIGGER windows with the SLOPE modes selected .....	5-14
MEASURE TRIGGER windows with the LEVEL modes selected .....	5-14
MEASURE TRIGGER window with the GRAD + mode selected .....	5-15
MEASURE TRIGGER windows with not active SOURCE signal line .....	5-15
MEASURE TRIGGER windows with the SOURCE signal selection .....	5-15
MEASURE TRIGGER windows with the LEVEL selection in the SLOPE + mode .....	5-16
MEASURE TRIGGER windows with the LEVEL selection in the SLOPE – mode (10 dB step down) .....	5-16
MEASURE TRIGGER windows with the LEVEL selection in the LEVEL + mode (1 dB step up) .....	5-16
MEASURE TRIGGER windows with the LEVEL selection in the LEVEL – mode (1 dB step up) .....	5-16
MEASURE TRIGGER windows with the LEVEL selection in the GRAD + mode (1 dB step down) .....	5-16
MEASURE TRIGGER windows with the GRADIENT selection (1 dB/ms and 10 dB/ms step up) .....	5-17
MEASURE TRIGGER windows with the GRADIENT selection (10 dB/ms up and 1 dB/ms down) .....	5-17
LOGGER SETUP windows in sound modes .....	5-17
LOGGER SETUP windows in vibration modes .....	5-18
LOGGER TRIGGER windows with the not active SOURCE signal line in sound modes .....	5-18
LOGGER TRIGGER windows with the not active SOURCE signal line in vibration modes .....	5-18
LOGGER TRIGGER windows with the LEVEL selection (1 dB step up) in sound modes .....	5-18
LOGGER TRIGGER windows with the LEVEL selection (1 dB step up) in vibration modes .....	5-18
LOGGER TRIGGER windows with the LEVEL selection in vibration modes (1 dB step up, cont.) .....	5-19
LOGGER TRIGGER windows with the LEVEL selection (10 dB step up) in sound modes .....	5-19

LOGGER TRIGGER windows with the LEVEL selection (10 dB step up) in vibration modes .....	5-19
LOGGER TRIGGER windows with the PRE selection in sound modes.....	5-20
LOGGER TRIGGER windows with the PRE selection in vibration modes.....	5-20
LOGGER TRIGGER windows with the PRE selection for different LOGGER STEPS.....	5-20
LOGGER TRIGGER windows with the POST selection .....	5-21
LOGGER TRIGGER windows with the POST selection for different LOGGER STEPS .....	5-21
LOGGER TRIGGER windows with the POST selection for different LOGGER STEPS in vibration modes.....	5-21
TRIGGER SETUP window; the RECORDER TRIGGER text highlighted .....	5-22
RECORDER TRIGGER windows; the TRIGGER selection .....	5-22
RECORDER TRIGGER windows; the source selection for SLOPE + (a) and SLOPE – (b) .....	5-22
RECORDER TRIGGER windows with the LEVEL selection (1 dB step up).....	5-22
RECORDER TRIGGER windows with the LEVEL selection in vibration modes, level expressed in linear units, 1 dB step up (a) and 10 dB step up (b).....	5-23
RECORDER TRIGGER windows with the LEVEL selection in sound and vibration modes (10 dB step up).....	5-23
RECORDER TRIGGER windows with the GRADIENT selection (1 dB step up).....	5-23
RECORDER TRIGGER windows with the GRADIENT selection (10 dB step up).....	5-23
DOSEMETER SETUP selected in the INPUT list and the DOSEMETER window .....	5-24
DOSEMETER SETUP windows; the CRITERION LEVEL selection .....	5-24
DOSEMETER SETUP windows; the THRESHOLD LEVEL selection.....	5-24
DOSEMETER SETUP windows; the EXCHANGE RATE selection .....	5-25
FFT selected in the INPUT list and the FFT window opened in sound modes (a) and in vibration modes (b) .....	5-25
FFT window; the FILTER selection in sound modes .....	5-26
FFT window; the BAND selection .....	5-26
FFT sublist; the WINDOW selection.....	5-27
FFT window; the LINES selection .....	5-27
FFT window; the LOGGER activation .....	5-27
SPECTRUM selected in the INPUT list and the SPECTRUM window opened in sound modes (a) and in vibration modes (b).....	5-28
SPECTRUM window; the FILTER selection in sound modes .....	5-28
SPECTRUM window; the BAND selection in sound modes .....	5-28
SPECTRUM window; the LOGGER selection.....	5-29
ENVELOPING selected in the INPUT list and the ENVELOPING window opened .....	5-29
ENVELOPING window; the FILTER selection in sound modes .....	5-30
ENVELOPING window; the BAND selection .....	5-30
ENVELOPING window; the LINES selection .....	5-31
RPM selected in the INPUT list and the RPM window opened.....	5-31
RPM window; the RPM selection.....	5-31
RPM window; the PULSES/ROTATIONS selection with 1 unit step.....	5-32
RPM window; the PULSES/ROTATIONS selection with 10 unit step.....	5-32
RPM window; the UNIT selection.....	5-32
Display in the main list; the DISPLAY text highlighted (displayed inversely) .....	6-1
Display with the DISPLAY list.....	6-1
DISPLAY MODES windows in SM.....	6-2
DISPLAY MODES windows in VM.....	6-2
Display in the LOGGER mode when there is nothing in the logger to be displayed (after setting LOGGER as active) .....	6-3
Measurement results in SM, made with linear integration, presented in one profile mode .....	6-3
Measurement results in VM presented in one profile mode.....	6-4
Measurement results, made with exponential integration in SM, presented in one profile mode.....	6-4
Measurement results, made with exponential integration in SM, saved in the file named MAR11, presented in one profile mode .....	6-4
Displays with the statistics made with linear integration presented in one profile mode.....	6-5
Displays with the statistics made with exponential integration presented in one profile mode .....	6-5
Measurement results in SM and unknown profile presented with the biggest fonts in one profile mode .....	6-6
Measurement results in VM and unknow profile presented with the biggest fonts in one profile mode .....	6-6
Displays during the measurement performed in SOUND LEVEL METER mode with the active LOGGER (an envelope icon).....	6-6
Displays during the measurement performed in VM with the active LOGGER (an envelope icon) .....	6-7
Displays after stopping the measurements with the name of the logger's file the data are saved.....	6-7
Measurement results from DOSE METER, made with exponential integration, presented in one profile mode .....	6-8

DISPLAY MODES windows in SM; SPECTRUM position accessible .....	6-8
DISPLAY MODES windows in VM.....	6-8
Displays in SPECTRUM mode for 1/1 OCTAVE (a), 1/3 OCTAVE (b) and FFT (c) .....	6-9
Setting on and off the accessibility of three profiles presentation mode.....	6-9
Measurement results in 3 PROFILES mode.....	6-9
Results in 3 PROFILES mode (SM); selection of the result in a profile .....	6-10
Results in 3 PROFILES mode (VM); selection of the result in a profile.....	6-10
Results in 3 PROFILES mode; selection of the profile .....	6-10
Displays with the statistics made with linear integration presented in 3 PROFILES mode .....	6-10
Displays during the measurement performed in SM with the active LOGGER .....	6-11
Displays during the measurement performed in LEVEL METER mode with the active LOGGER (the first three) and after saving the results (the last one) .....	6-11
Setting on (a) and off (b) the accessibility of statistics presentation mode .....	6-11
Results presented in the statistics presentation mode .....	6-12
Instrument's default Lxx levels presented in the graphical form.....	6-12
Results presented in both statistic presentation modes .....	6-12
Results presented in both statistic presentation modes during the measurements .....	6-12
Setting on and off the accessibility of LOGGER presentation mode .....	6-13
Exemplary displays with the measurement results saved in the logger .....	6-13
Setting on and off the file description presentation mode.....	6-13
Exemplary contents of the FILE INFO window .....	6-13
DISPLAY list with the DISPLAY SETUP selected.....	6-14
DISPLAY SETUP windows in SLM (a), in VLM (b) in FFT (SM) (c) and in 1/1 and 1/3 OCTAVE (VM) (d)....	6-14
Displays with the possible options of the vibration SCALE.....	6-14
Measurement results (VM) presented in linear (a) and logarithmic (b) scale.....	6-15
Displays with the possible values of the DYNAMIC parameter .....	6-15
Displays with the results stored in the logger presented with different DYNAMIC parameter .....	6-15
DISPLAY SCALE windows; the X-ZOOM selection.....	6-15
Displays in 1/1 OCTAVE SPECTRUM 3x, 4x, and 5x X-ZOOM.....	6-15
Displays in 1/3 OCTAVE SPECTRUM 2x, 3x, 4x, and 5x X-ZOOM .....	6-16
Displays in FFT SPECTRUM 1x, 2x, 3x, 4x, and 5x X-ZOOM .....	6-16
Displays with the grid switched on and off .....	6-16
Displays with the grid switched on and off .....	6-16
DISPLAY SETUP window; the SPECTRUM TYPE text highlighted.....	6-17
SPECTRUM TYPE windows with the available values.....	6-17
DISPLAY SETUP window; the SPECTRUM VIEW text highlighted .....	6-17
SPECTRUM VIEW windows; the VIEW selection .....	6-17
SPECTRUM VIEW windows; the TYPE selection .....	6-18
SPECTRUM VIEW windows; the MAX selection .....	6-18
SPECTRUM VIEW windows; the MIN selection.....	6-18
DISPLAY SETUP window; the TOTAL VALUES text highlighted.....	6-18
TOTAL VALUES windows; the weighting filters selection in SM .....	6-19
TOTAL VALUES windows in VM; the TOTALx selected.....	6-19
TOTAL x windows; the weighting filters selection in VM .....	6-19
TOTALx windows; the TYPE selection.....	6-20
TOTALx windows; CALIBRATION FACTOR setting.....	6-20
DISPLAY SETUP windows, the LOGGER VIEW text highlighted.....	6-20
LOGGER VIEW windows with the possible values of the VIEW parameter .....	6-20
Displays with the possible values of the VIEW parameter.....	6-21
LOGGER VIEW windows with the possible values of the TIME parameter.....	6-21
Displays with the possible values of the TIME parameter .....	6-21
DISPLAY list; the LOGGER VIEW text highlighted .....	6-21
Displays in the LOGGER VIEW sub-list .....	6-22
Displays in the LOGGER VIEW sub-list; the selection of the file to be seen .....	6-22
Displays in the LOGGER VIEW sub-list; the scrolling of the file to be seen .....	6-22
Display in the LOGGER VIEW sub-list in the case when the files do not exist .....	6-22
Displays with the selected logger's file; the change of the cursor position .....	6-23
Displays with the selected logger's file; the scrolling to the right .....	6-23
Displays with the selected logger's file; the scrolling to the left .....	6-23
Displays with the selected logger's file; the change of the axis relation .....	6-23

Displays with the selected logger's file; the change of the profile.....	6-23
Displays with the selected logger's file; the change of the result from a profile .....	6-24
DISPLAY list; the SCREEN SETUP text highlighted .....	6-24
SCREEN SETUP windows; the change of the contrast.....	6-24
SCREEN SETUP windows; the BACKLIGHT TIMEOUT active (a), and not active (b) .....	6-25
DISPLAY list; the BATTERY text highlighted.....	6-25
BATTERY windows for different sources powering the instrument.....	6-25
DISPLAY list; the UNIT LABEL text highlighted.....	6-25
UNIT LABEL windows opened and after scrolling with the <▲>, <▼> push-buttons.....	6-26
Main list; the FILE text highlighted (displayed inversely) .....	7-2
FILE list of the instrument .....	7-3
SAVE window in the FILE list .....	7-3
Display during the process of setting the character in the edited name.....	7-4
Display during the selection of the character's position to be edited.....	7-4
Display during the selection of the character .....	7-4
FILE NAME edition after pressing the <SHIFT> and <▶> push-buttons.....	7-4
FILE NAME edition after pressing the <SHIFT> and <◀> push-buttons.....	7-4
Displays during the attempt of overwriting the existing file, changing the name and saving data .....	7-5
Displays in the simplified edition of the file name and the execution of the saving operation.....	7-5
Displays in the simplified edition of the file name, saving and the "saturation" of that operation .....	7-5
Displays after the attempt to perform unavailable saving operation and the return to the SAVE NEXT .....	7-6
Display after the SAVE operation when there were no results for storing .....	7-6
View of all displays during and after the execution of the SAVE operation .....	7-6
Displays after the attempt to overwrite a file if the REPLACE is not active .....	7-6
Settings and the FILE INFO after the performed measurements .....	7-7
FREE SPACE window before and after saving the @EXAMP1 file .....	7-7
Settings and the FILE INFO after the performed measurements .....	7-7
FREE SPACE window before and after saving the @EXAMP2 file .....	7-8
Settings before the execution of the measurements .....	7-8
Settings for the current measurements .....	7-8
FILE INFO during and after the measurements.....	7-8
FREE SPACE window before and after saving the @EXAMP3 and &LOG100 files.....	7-9
Settings before the execution of the measurements .....	7-9
Settings and the FILE INFO during and after the measurements.....	7-9
FREE SPACE window before and after saving the @EXAMP4 and &LOG100 files.....	7-9
FILE list with the SAVE OPTIONS text highlighted (displayed inversely).....	7-10
SAVE OPTIONS sub-list; the selection of the RAM FILE.....	7-10
SAVE OPTIONS sub-list; the selection of the REPLACE.....	7-11
SAVE OPTIONS window without RAM FILE position; the selection of the REPLACE .....	7-11
Displays during the file saving when the REPLACE is switched off and on.....	7-11
SAVE OPTIONS sub-list; the selection of the SAVE STATISTICS.....	7-12
SAVE OPTIONS window without RAM FILE position; the selection of the SAVE STATISTICS.....	7-12
SAVE OPTIONS sub-list; the selection of the AUTO SAVE .....	7-12
SAVE OPTIONS sub-list; the selection of the AUTO SAVE in DOSE METER .....	7-13
Displays during the execution of the AUTO SAVE switching on; the FILE NAME skipping and return to the SAVE OPTION sub-list.....	7-13
Display after attempt of switching on AUTO SAVE option with too short INT. PERIOD.....	7-13
Displays during the execution of the AUTO SAVE switching on; the FILE NAME confirmation and return to the FILE list .....	7-13
Displays after the incorrect file name edition .....	7-14
Measurement results (SM) presented after pressing the <▲> or <▼> push-buttons.....	7-14
Measurement results (VM) presented after pressing the <▲> or <▼> push-buttons .....	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons.....	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons.....	7-14
Results saved from a profile presented after pressing the <◀> or <▶> and <ALT> push-buttons.....	7-15
SAVE OPTIONS sub-list; the selection of the DIRECT SAVE.....	7-15
SAVE OPTIONS window without RAM FILE position; the selection of the DIRECT SAVE .....	7-15
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-16
Exemplary executions of the software with the DIRECT SAVE not active .....	7-16
Exemplary executions of the software with the DIRECT SAVE active .....	7-16

SAVE OPTIONS sub-list; the selection of the SAVE MAX SPECT. in SM (a) and in VM (b).....	7-16
SAVE OPTIONS sub-list; the selection of the SAVE MIN SPECT. in SM (a) and in VM (b).....	7-17
FILE list with the LOAD text highlighted (displayed inversely).....	7-17
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-17
Display during the execution of the LOAD operation.....	7-18
Exemplary contents of the LOAD window.....	7-18
Exemplary result files associated with the same logger file (&LOG2).....	7-18
Display during the execution of the loading function.....	7-19
Displays after the execution of the LOAD operation.....	7-19
Exemplary displays during the loading and checking the contents of a DOSE METER file.....	7-19
Exemplary displays during the loading and checking the contents of a LEVEL METER file.....	7-19
FILE list with the DELETE text highlighted (displayed inversely).....	7-20
RESULT FILES selected to be deleted and the flash memory does not contain any file.....	7-20
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-20
Selection of the RESULT FILES to be deleted.....	7-21
Execution of the RESULT FILES deletion.....	7-21
Execution of the @EXAMP4 file deletion and the influence of this process on the memory space.....	7-22
Execution of the @EXAMP5 file deletion and the influence of this process on the memory space.....	7-22
LOGGER FILES selected to be deleted and the memory does not contain any file.....	7-22
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-23
Selection of the LOGGER FILES to be deleted.....	7-23
Execution of the LOGGER FILES deletion.....	7-23
Execution of the &LOG107 file deletion from the logger memory and its influence on the memory space (LOGGER AVAILABLE).....	7-24
Execution of the &LOG113 file deletion and the influence of this process on the memory space.....	7-24
SETUP FILES selected to be deleted and the instrument's memory does not contain any file.....	7-24
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-25
Selection of the SETUP FILES to be deleted.....	7-25
Execution of the RESULT FILES deletion.....	7-25
Execution of the @SET3 file deletion and its influence on the memory space.....	7-26
Execution of the @SET8 file deletion and the influence of this process on the memory space.....	7-26
DELETE ALL text highlighted (displayed inversely) in the FILE list.....	7-26
RESULT FILES selected to the execution of the DELETE ALL operation.....	7-26
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-27
Displays with the confirmation window during the execution of the DELETE ALL operation.....	7-27
Execution of the DELETE ALL operation in the case of RESULT FILES selection.....	7-27
LOGGER FILES selected to the execution of the DELETE ALL operation.....	7-27
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-28
Displays with the confirmation window during the execution of the DELETE ALL operation.....	7-28
Execution of the DELETE ALL operation in the case of LOGGER FILES selected.....	7-28
SETUP FILES selected to the execution of the DELETE ALL operation.....	7-28
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-29
Displays with the confirmation window during the execution of the DELETE ALL operation.....	7-29
Execution of the DELETE ALL operation in the case of SETUP FILES selection.....	7-29
Execution of the DELETE ALL operation for all type files simultaneously.....	7-29
DEFRAGMENTATION text highlighted (displayed inversely) in the FILE list.....	7-30
FILES DEFRAGMENT. selected to the execution of the DEFRAGMENTATION operation.....	7-30
Confirmation windows during the execution of the FILES DEFRAGMENTATION operation.....	7-31
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-31
Message in the case when the execution of the DEFRAGMENTATION operation is unnecessary.....	7-31
Execution of the DEFRAGMENTATION operation.....	7-31
Result of the FILES DEFRAGMENTATION operation.....	7-32
LOGGER DEFRAGMENT. selected to the execution of the DEFRAGMENTATION operation.....	7-32
Confirmation windows during the execution of the LOGGER DEFRAGMENTATION operation.....	7-32
Display after the attempt to perform an unavailable operation during measurement in progress.....	7-32
Message in the case when the execution of the DEFRAGMENTATION operation is unnecessary.....	7-33
Execution of the DEFRAGMENTATION operation.....	7-33
Result of the LOGGER DEFRAGMENTATION operation.....	7-33
CATALOGUE text highlighted (displayed inversely) in the FILE list.....	7-33
CATALOGUE window when the memory is empty.....	7-34

Contents of the CATALOGUE window .....	7-34
Exemplary result files associated with the same logger file &LOG2 in the CATALOGUE window .....	7-35
FREE SPACE text highlighted (displayed inversely) in the FILE list .....	7-35
FREE SPACE window after the execution of the DELETE ALL operation .....	7-35
FREE SPACE window with the number depending on the measurements and operations performed .....	7-36
SAVE SETUP text highlighted (displayed inversely) in the FILE list .....	7-36
SAVE SETUP window in the FILE list .....	7-36
Display during the process of setting the character in the edited name .....	7-36
Display during the selection of the character's position to be edited .....	7-37
Display during the selection of the character .....	7-37
Displays in the FILE NAME edition after pressing the <SHIFT> and <▶> push-buttons .....	7-37
Displays in the FILE NAME edition after pressing the <SHIFT> and <◀> push-buttons .....	7-37
Displays during the attempt of overwriting the existing file, changing the name and saving data .....	7-38
Displays in the simplified edition of the setup file name and saving operation execution .....	7-38
Displays in the simplified edition of the file name, saving and the "saturation" of that operation .....	7-38
Displays after the attempt to perform unavailable saving operation; the return to the SAVE SETUP .....	7-39
View of all displays during and after the execution of the SAVE operation .....	7-39
Displays after the attempt to overwrite a file if the REPLACE is active .....	7-39
FILE list with the LOAD SETUP text highlighted (displayed inversely) .....	7-40
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-40
Display during the execution of the LOAD SETUP operation .....	7-40
Exemplary contents of the LOAD SETUP window .....	7-40
Displays after the execution of the LOAD SETUP operation .....	7-41
FILE list with the DIRECTORY text selected (a) and the DIRECTORY window opened (b) .....	7-41
FILE list, the DIRECTORY window .....	7-41
FILE list with the COPY FILES TO USB text selected (a) and the COPY FILES window opened (b) .....	7-42
RESULT FILES selection to the execution of the COPY FILES TO USB operation (a); the RESULT, LOGGER and SETUP files selected to the execution of the COPY FILES TO USB operation (b) .....	7-42
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-42
Display after the execution of COPY FILES TO USB operation (a) and when the file exists already (b) .....	7-42
FILE list with the MOVE FILES TO USB text selected (a) and the MOVE FILES window opened (b) .....	7-43
RESULT FILES selection to the execution of the MOVE FILES TO USB operation (a) the RESULT, LOGGER and SETUP files selected to the execution of the MOVE FILES TO USB operation (b) .....	7-43
Display after the attempt to perform an unavailable operation during measurement in progress .....	7-43
Display after the execution of MOVE FILES TO USB operation (a) and when the file already exists in the USB memory (b) .....	7-44
Display in the main list; the REPORT text highlighted (displayed inversely) .....	8-1
SETUP list with the USB-HOST PORT selected and this window with the activated RS232 .....	8-1
SETUP list with the RS232 selected and the exemplary contents of this window .....	8-1
REPORT windows in SM (SOUND METER) mode .....	8-2
REPORT windows in the vibration modes .....	8-2
REPORT windows with the TITLE selected in SM (a) and VM (b) .....	8-3
Displays in the text edition of the report's header .....	8-3
Displays with all available characters .....	8-3
Displays with all available characters (cont.) .....	8-4
REPORT windows with the PRINT RESULTS selected in SM (a) and VM (b) .....	8-4
Display after the attempt to perform an unavailable operation during measurement in progress .....	8-4
Display in the REPORT list; the execution of the PRINT RESULTS .....	8-4
Example of the printed results - A5 format .....	8-5
Example of the printed results from the SOUND METER mode (LEVEL METER) - A4 format .....	8-6
Example of the printed results from the VIBRATION METER mode (1/3 OCTAVE) - A4 format .....	8-7
Displays with the confirmation request of the paper ejection .....	8-7
Displays during the results printing when there is no transfer (a) and no data (b) .....	8-8
REPORT window with the PRINT STATISTICS selected .....	8-8
Display after the attempt to perform an unavailable operation during measurement in progress .....	8-8
Display in the REPORT list; the execution of the PRINT STATISTICS .....	8-8
Displays with the confirmation request of the paper ejection .....	8-9
Example of the printed statistics from the VOLTAGE (SOUND) mode (1/1 OCTAVE) - format A5 .....	8-11
Example of the printed statistics from the SOUND METER mode (DOSE METER) - format A4 .....	8-12
Displays during the statistics printing when there is no transfer (a) and no data (b) .....	8-12

REPORT windows with the PRINT FILE selected in SM (a) and VM (b).....	8-13
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-13
Display in the REPORT list; the PRINT FILE position when no files were saved.....	8-13
Displays during the selection of the file to be printed.....	8-13
Display during the execution of the PRINT FILE operation.....	8-14
Display during the file sending out when there is no data transfer.....	8-14
Example of the printed file from the VIBRATION METER mode (1/3 OCTAVE) - format A5.....	8-15
Example of the printed file from the SOUND METER mode (LEVEL METER) - format A4.....	8-16
REPORT windows with the PRINT LOGGER selected in SM (a) and VM (b).....	8-17
PRINT LOGGER window opened - Function not available message.....	8-17
REPORT windows with the PRINT USER FILTERS selected in SM and VM.....	8-17
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-17
PRINT USER FILTERS windows; the user filter selection.....	8-17
Display in the REPORT list; the execution of the PRINT USER FILTERS.....	8-18
Display during the file transfer from the logger when there is no data transfer.....	8-18
Example of the printed coefficients of the user filter S1- format A4.....	8-18
Example of the printed coefficients of the user filter S2 - format A5.....	8-19
REPORT windows with the PRINT CATALOGUE selected in SM (a) and VM (b).....	8-19
Display after the attempt to perform an unavailable operation during measurement in progress.....	8-19
Display in the REPORT list; the execution of the PRINT CATALOGUE.....	8-20
Displays with the confirmation request of the paper ejection.....	8-20
Example of the printed catalogue - format A4.....	8-20
Example of the printed catalogue - format A5.....	8-21
Display during the catalogue printing when there is no data transfer.....	8-21
REPORT windows with the OPTION selected in SM (a) and in VM (b).....	8-21
OPTIONS windows; the selection of the format.....	8-22
OPTIONS windows; the selection of the paper ejection.....	8-22
Displays with the request for the confirmation of the paper ejection.....	8-22
Display after a printing when there is not possible to eject a paper.....	8-22
Display in the main list; the SETUP text highlighted (displayed inversely).....	9-1
SETUP list in the SM.....	9-2
SETUP list in the VM.....	9-2
SETUP list; the LANGUAGE text highlighted (displayed inversely).....	9-3
Displays with the English version of the user interface.....	9-3
Displays with the Italian version of the user interface.....	9-3
Displays with the Polish version of the user interface.....	9-3
Displays with the Hungarian version of the user interface.....	9-3
Displays with the Flemish version of the user interface.....	9-4
Displays with the French version of the user interface.....	9-4
Displays with the Spanish version of the user interface.....	9-4
Displays with the German version of the user interface.....	9-4
Displays with the Turkish version of the user interface.....	9-4
Displays during the entering of the access code to the Russian version of the user interface.....	9-4
Displays with the Russian version of the user interface available only on some markets.....	9-4
SETUP list; the CLEAR SETUP text highlighted (displayed inversely).....	9-5
Displays with the request for the confirmation for the CLEAR SETUP execution.....	9-5
Displays during and after the execution of the CLEAR SETUP function.....	9-5
SETUP list with the DAY TIME LIMITS text highlighted (displayed inversely).....	9-5
Displays with the available DAY TIME LIMITS.....	9-6
SETUP list with the EXPOSURE TIME text highlighted (displayed inversely).....	9-6
EXPOSURE TIME windows.....	9-6
SETUP list, the EXTERNAL I/O SETUP text highlighted.....	9-7
EXTERNAL I/O SETUP windows; the MODE selection.....	9-7
EXTERNAL I/O SETUP windows; D/A selection.....	9-7
EXTERNAL I/O SETUP windows; the source selection for D/A option.....	9-8
MEASURE TRIGGER windows; the TRIGGER selection.....	9-8
EXTERNAL I/O SETUP windows; the FUNCTION selection.....	9-8
EXTERNAL I/O SETUP windows; the POLARISATION selection.....	9-9
EXTERNAL I/O SETUP windows; the ACTIVE LEVEL selection.....	9-9
EXTERNAL I/O SETUP windows; the SOURCE selection.....	9-9

EXTERNAL I/O SETUP windows; the ALARM LEVEL setting .....	9-10
SETUP list, the HUMAN VIB. text highlighted (displayed inversely) .....	9-10
Displays during the entering of the access code to a function.....	9-10
SETUP list, the IEPE CURRENT text highlighted (displayed inversely) .....	9-11
IEPE CURRENT windows; the IEPE supply selection .....	9-11
SETUP list, the MICROPHONE text highlighted (displayed inversely).....	9-11
MICROPHONE windows; the activation of the COMPENSATION filter .....	9-12
MICROPHONE windows; the activation of the OUTDOOR FILTER .....	9-12
MICROPHONE windows; the activation of the OUTDOOR FILTER .....	9-12
MICROPHONE windows; selection of the FIELD CORRECTION.....	9-13
SETUP list, the REFERENCE LEVELS text highlighted (displayed inversely).....	9-13
REFERENCE LEVELS windows; the reference level setting of acceleration signal.....	9-13
REFERENCE LEVEL windows; setting the reference level of velocity signal .....	9-14
REFERENCE LEVELS windows; setting the reference level of displacement signal .....	9-14
REFERENCE LEVELS windows; the reference level of the acoustic signal.....	9-14
SETUP list, the REMOTE COMMUNICATION text highlighted (displayed inversely) .....	9-15
REMOTE COMMUNICATION windows; the TYPE selection .....	9-15
REMOTE COMMUNICATION windows; packet size selection .....	9-15
SETUP list with the RMS INTEGRATION text highlighted (displayed inversely).....	9-15
Displays and with the available options of the RMS INTEGRATION .....	9-16
SETUP list, the RPM MEASUREMENT text highlighted (displayed inversely).....	9-16
Displays during the entering of the access code to a function.....	9-16
INPUT list after activation of the RPM MEASUREMENT function .....	9-16
SETUP list, the RS232 text highlighted (displayed inversely) .....	9-17
RS232 windows; the possible settings of the BAUD RATE .....	9-17
RS232 window; the setting of the TIME OUT with 1-second step.....	9-17
RS232 window; the setting of the TIME OUT with 10-seconds step .....	9-18
SETUP list, the RTC text highlighted (displayed inversely) .....	9-18
RTC windows with the different parameters to be set .....	9-18
RT60 AVERAGING window; the AVERAGING activation.....	9-19
RT60 AVERAGING window; the AVERAGING CLEAR selection .....	9-19
RT60 AVERAGING window; the change of AVERAGING NO. after measurement (position is not accessible).....	9-19
RT60 selected in the SETUP list and the RT60 OPTIONS window opened .....	9-20
RT60 OPTIONS window; the SMOOTHING selection with the step equal to 1 .....	9-20
RT60 OPTIONS window; the SMOOTHING selection with the step equal to 5 .....	9-20
RT60 OPTIONS window; the NOISE MAR. selection with 0.1dB step .....	9-20
RT60 OPTIONS window; the NOISE MAR. selection with 1dB step .....	9-21
RT60 RESULTS selected in the SETUP list and the RT60 RESULTS window opened .....	9-21
RT60 RESULTS window, unmarking option in 1/3 octave band.....	9-21
SETUP list, the SHIFT MODE text highlighted (displayed inversely) .....	9-22
SHIFT MODE windows; the available SHIFT settings.....	9-22
SHIFT MODE windows; the available ST/SP settings.....	9-22
SETUP list, the SIGNAL GENERATOR selected (highlighted inversely) .....	9-23
Display in the opened SIGNAL GENERATOR window .....	9-23
SETUP list, the STATISTICAL LEVELS sub-list selected .....	9-23
Displays in the STATISTICAL LEVELS sub-list .....	9-24
SETUP list, the TIMER text highlighted (displayed inversely).....	9-24
TIMER windows; the mode selection.....	9-24
TIMER windows; setting day of the instrument's switch on .....	9-25
TIMER windows; setting hour and minute of the instrument's switch on.....	9-25
TIMER windows; setting REPETITION parameter .....	9-26
Exemplary settings made for the desired execution of the TIMER function .....	9-26
Counting down during the warming up of the instrument after switching it on.....	9-26
Displays during the executing of the TIMER function .....	9-27
TONALITY selected in the SETUP list and the TONALITY window opened.....	9-27
TONALITY window, MAX BAND selection with 1 % step .....	9-27
TONALITY window, MAX BAND selection with 5 % step .....	9-28
TONALITY window, TONE SEEK selection with 0.1 dB step.....	9-28
TONALITY window, TONE SEEK selection with 1 dB step.....	9-28

---

TONALITY window, REGRESSION selection with 1 % step.....	9-28
TONALITY window, REGRESSION selection with 5 % step.....	9-29
TONALITY window, TONE BAND selection with 0.1 dB step .....	9-29
TONALITY window, TONE BAND selection with 1 dB step .....	9-29
TONALITY window, STANDARD selection.....	9-29
SETUP list, the USB-HOST PORT text highlighted (displayed inversely).....	9-30
Displays in the USB-HOST PORT .....	9-30
Displays during the entering of the access code to SRT RECORDING, WAVE RECORDING or EVENT RECORDING.....	9-30
Displays with the different USB disk warnings.....	9-31
Contents of the DIRECTORY window .....	9-32
Displays during the IrDA interface connection .....	9-32
SETUP list, the USER FILTERS text highlighted (displayed inversely) .....	9-33
USER FILTERS windows, REAL TIME FILTERS selected (a), SPECTRUM BASED FILTERS selected (b) ...	9-33
USER FILTERS windows, REAL TIME FILTERS selected .....	9-33
Displays during the entering of the access code to REAL TIME FILTERS .....	9-33
REAL TIME FILTERS windows, the filter selection .....	9-34
R1 filter windows, the TYPE selection.....	9-34
R1 filter windows, the HFC(3dB) selection for a LOWPASS filter.....	9-34
R1 filter windows, the LFC(3dB) selection for a HIGHPASS filter .....	9-34
R1 filter windows, the LFC(3dB) selection and the HFC(3dB) selection for BANDPASS filter .....	9-35
USER FILTERS windows, SPECTRUM BASED FILTERS selected.....	9-35
SPECTRUM BASED FILTERS window, the VIEW text highlighted .....	9-35
VIEW windows, the filter selection.....	9-36
S1 filter windows.....	9-36
SPECTRUM BASED FILTERS window, the EDIT text highlighted.....	9-36
EDIT windows, the filter selection .....	9-36
S1 filter windows; the coefficient selection.....	9-37
SPECTRUM BASED FILTER window; the CLEAR position selected .....	9-37
CLEAR windows, the selection of the filters to be cleared.....	9-37
Displays during and after the execution of CLEAR operation .....	9-37
SETUP list, the VIBRATION UNITS text highlighted (displayed inversely) .....	9-38
VIBRATION UNITS windows with the available positions.....	9-38
SETUP list, the WARNINGS text highlighted (displayed inversely) .....	9-38
WARNINGS windows; RESULTS NOT SAVED selected.....	9-38
Displays with LAST RESULTS NOT SAVE warning .....	9-39
WARNINGS windows; USB DISK FREE SP. selected .....	9-39
WARNINGS windows; MIN FREE SPACE selection .....	9-39
Display with USB DISK FREE SPACE warning.....	9-40

